


# EIKI

DLP® PROJECTOR


## MODEL EIP-WX5000/WX5000L Quick Guide

This Quick Guide shows the basic operation (projector connecting with the computer using an RGB cable). Before using the projector, please read the Owner's Manual carefully.


### Setup and Projection

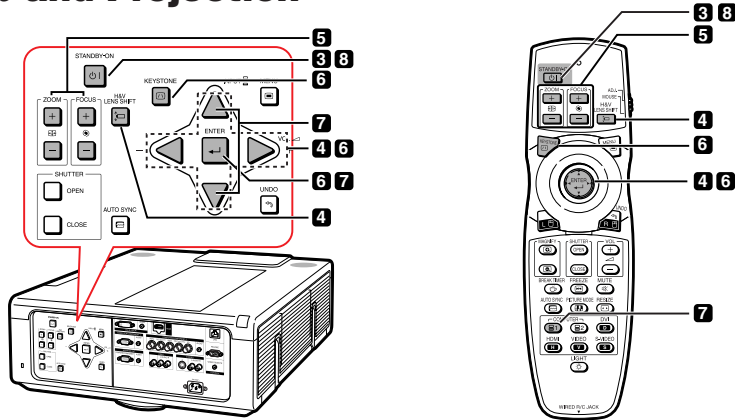


#### 1. Place the projector facing a screen

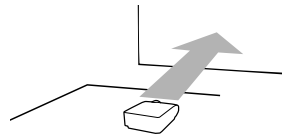

#### 2. Connect the projector to the computer and plug the power cord into the AC socket of the projector

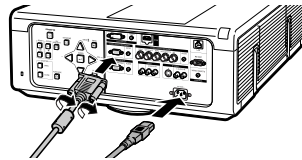

#### 3. Remove the lens cap and turn the projector on

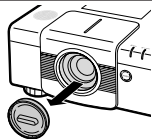


Press **STANDBY-ON** on the projector or on the remote control.

#### 4. Adjust the angle

Adjust the projector angle:

- Shift the lens horizontally and vertically.
  - ① Press **H&V LENS SHIFT** on the projector or on the remote control.
  - ② Press **▲**, **▼**, **◀** or **▶** on the projector or the remote control.
- Adjust the projector angle by rotating the adjustment feet.

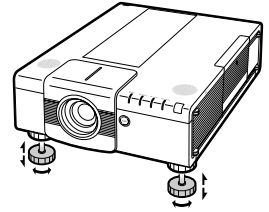

#### 5. Adjust the focus and the zoom

- ① Press **FOCUS +/-** on the projector or on the remote control to adjust the focus.
- ② Press **ZOOM +/-** on the projector or on the remote control to adjust the zoom.

#### 6. Correcting the image distortion due to the projection angle

- ① Press **KEYSTONE** on the projector or on the remote control.
  - ② Press **ENTER** on the projector or on the remote control.
  - ③ Press **▲**, **▼**, **◀** or **▶** to move the position for the upper left of the image.
  - ④ Press **ENTER** to set the position.
  - ⑤ Repeat the same procedure with the positions for the upper right, lower right and lower left of the image.
- When the position of the lower left is set, the correction is made and the display disappears.

#### 7. Select the input mode

Press **INPUT** on the projector or **COMPUTER1** on the remote control to select the "COMPUTER1" mode.



INPUT list	
INPUT	
1	COMPUTER1
2	COMPUTER2
D	DVI

On-screen Display (RGB)	
1	COMPUTER1
	RGB
	1024 x 768

Switching the Input Mode:

- When you press **INPUT** on the projector, the INPUT list appears. Press **▲/▼** to switch the INPUT mode and then press **ENTER**.
- When using the remote control, press **COMPUTER1/2**, **DVI**, **HDMI**, **VIDEO** or **S-VIDEO** to switch the input mode.

#### 8. Turn the power off

Press **STANDBY-ON** on the projector or on the remote control. While the confirmation message is displayed, press **STANDBY-ON** again.



- You can unplug the power cord even if the projector is operating.
- Even if you unplug the power cord from the AC outlet, the cooling fan continues to run for a while.

# EIKI

Printed in China  
XXXXXXXXXXXXXX  
08P07-CH-NM