

RC Command

'04. 10.1

Model	LC-XB25/XB20 LC-SB20	LC-XB26/XB21 LC-SB21	LC-XB22
RC NO.	CXMK	CXRT	CXSR
ON-OFF	00	00	00
VIDEO	05	05	05
COMPUTER	38	38	38
FREEZE	43	43	43
NO SHOW	8B	8B	8B
P-TIMER	8A	8A	8A
IMAGE	0C	0C	0C
MUTE	0B	0B	0B
MENU	1C	1C	1C
AUTO PC	89	89	89
D.ZOOM	01	01	01
D.ZOOM	02	02	02
KEystone	5B	5B	5B
Corsor /VOLUME+	1D	1D	1D
Corsor /VOLUME-	1E	1E	1E
Corsor	8C	8C	8C
Corsor	8D	8D	8D
SELECT	0F	0F	0F
PAGE	59	59	59
PAGE	5A	5A	5A
AUTO SET	-	17	-

[NOTE]

- CXSR for LC-XB22 : without Mouse control function
- AUTO SET Command : Auto Setup function (Vertical Keystone & PC Adj.)