

RC Command

'04. 10.1

Model	LC-X50M/X50	LC-X70
RC NO.	CXPD	CXSM
ON-OFF	00	00
INPUT 1	38	38
INPUT 2	39	39
INPUT 3	06	06
INPUT 4	08	-
FREEZE	43	43
NO SHOW	8B	8B
P-TIMER	8A	8A
IMAGE	0C	0C
MUTE	0B	0B
MENU	1C	1C
AUTO PC ADJ.	89	89
LENS SHIFT ▲	5D	5D
LENS SHIFT ▼	5E	5E
D.ZOOM ▲	01	01
D.ZOOM ▼	02	02
ZOOM ▲	47	47
ZOOM ▼	46	46
FOCUS ▲	4A	4A
FOCUS ▼	4B	4B
KEystone	5B	5B
Cursor →/VOLUME+	1D	1D
Cursor ←/VOLUME-	1E	1E
Cursor ↑	8C	8C
Cursor ↓	8D	8D
SELECT	0F	0F
COLOR.M	3B	3B