RC Command

								03. 9.25
NO.	CXLF	CXPD	CXMA	CXJV	CXJZ	СХМК	CXPL	CXMW
Model	LC-X1100 X986	LC-X50M X50	LC-XG210 XG110	LC-X5 X4i/SX4Li	LC-XT3 UXT3	LC-SB20 XB25/XB20	LC-SD10	LC-XE10 SE10
Function			XG200/100	SX4/X4	XT2			
ON-OFF	00	00	00	00	00	00	00	00
INPUT	05	-	-	-	-	-	_	-
INPUT 1/2	_	-	-	07	07	-	_	-
INPUT 3/4	_	-	-	-	05	-	_	-
INPUT 3	-	_	-	05	-	-	-	-
INPUT 1	_	38	-	-	-	-	_	-
INPUT 2	_	39	-	-	-	-	_	-
INPUT 3	_	06	-	-	-	-	_	-
INPUT 4	_	08	-	-	-	-	_	-
VIDEO	-	-	05	-	-	05	05	05
COMPUTER	-	-	-	-	-	38	38	-
COMPUTER 1	-	-	38	-	-	-	-	38
COMPUTER 2	-	-	39	-	-	-	-	39
VOLUME +	09	-	-	09	09	-	-	-
VOLUME -	0A	-	-	0A	0A	-	-	-
FREEZE	43	43	43	43	43	43	43	43
NO SHOW	8B	8B	8B	8B	8B	8B	8B	8B
P-TIMER	8A	8A	8A	8A	8A	8A	8A	8A
IMAGE	0C	0C	0C	0C	0C	0C	0C	0C
MUTE	0B	0B	0B	0B	0B	0B	0B	0B
MENU	1C	1C	1C	1C	1C	1C	1C	1C
AUTO PC ADJ.	89	89	89	89	89	89	89	89
LENS SHIFT	-	-	-	40	40	-	-	-
LENS SHIFT	5D	5D	5D	-	-	-	-	-
LENS SHIFT ▼	5E	5E	5E	-	-	-	-	-
D.ZOOM	01	01	01	01	01	01	01	01
D.ZOOM V	02	02	02	02	02	02	02	02
ZOOM 🔺	47	47	47	47	47	-	-	47
ZOOM ▼	48	46	46	46	46	-	-	46
FOCUS 🔺	4A	4A	4A	4A	4A	-	Ι	4A
FOCUS V	4B	4B	4B	4B	4B	-	-	4B
KEYSTONE	5B	5B	5B	-	-	5B	5B	5B
KEYSTONE	_	_	-	8E	8E	-	-	-
KEYSTONE ▼	_	_	-	8F	8F	-	-	-
Cursor \rightarrow /VOLUME+	-	1D	1D	-	-	1D	1D	1D
Cursor ←/VOLUME-	_	1E	1E	-	-	1E	1E	1E
Cursor ↑	_	8C	8C	-	_	8C	8C	8C
Cursor↓	_	8D	8D	-	_	8D	8D	8D
SELECT	-	0F	0F	-	-	0F	0F	0F
COLOR. M	_	3B	-	-	_	-	_	-
PAGE 🔺	_	-	-	-	-	59	59	59
PAGE 🔻	_	-	-	_	-	5A	5A	5A
AUTO SET UP	-	-	-	-	-	-	-	17

03. 9.25