

RC Command

'04. 10.1

Model	LC-XB25/XB20 LC-SB20	LC-XB26/XB21 LC-SB21	LC-XB22
RC NO.	CXMK	CXRT	CXSR
ON-OFF	00	00	00
VIDEO	05	05	05
COMPUTER	38	38	38
FREEZE	43	43	43
NO SHOW	8B	8B	8B
P-TIMER	8A	8A	8A
IMAGE	0C	0C	0C
MUTE	0B	0B	0B
MENU	1C	1C	1C
AUTO PC	89	89	89
D.ZOOM ▲	01	01	01
D.ZOOM ▼	02	02	02
KEystone	5B	5B	5B
Corsor →/VOLUME+	1D	1D	1D
Corsor ←/VOLUME-	1E	1E	1E
Corsor ↑	8C	8C	8C
Corsor ↓	8D	8D	8D
SELECT	0F	0F	0F
PAGE ▲	59	59	59
PAGE ▼	5A	5A	5A
AUTO SET	-	17	-

【NOTE】

- CXSR for LC-XB22 : without Mouse control function
- AUTO SET Command : Auto Setup function (Vertical Keystone & PC Adj.)