

LC-XB40N (SANYO : PLC-XU110) IR Command List

- Transmission format of LCD projector operation key
: NEC Format (single command / command pipelining mode)
- Transmission format of PC mouse operation button (mouse cursor button) / L / R key
: Interlink Mouse Code Format (Includes 3 bit of ID)
- Format for the transmission of OSD Laser operation button (mouse cursor button)
: Interlink OSD Mouse Code Format (Includes 3 bit of ID)
- Custom Code + Custom Code
: 8 patterns as below
33h+00h(Default; code1), 33h+11h(code2), 33h+22h(code3), 33h+33h(code4),
33h+44h(code5), 33h+55h(code6), 33h+66h(code7), 33h+77h(code8)

Key No.	Data Code (HEX)	Function
1	*1	L-CLICK Back-side Click Trigger Key
2	00	ON-OFF
3	38	COMPUTER
4	05	VIDEO
5	08	NETWORK
6	89	AUTO PC
7	5B	KEYSTONE
8	17	AUTO SET
9	8C	CURSOR UP
10	1E	CURSOR LEFT/VOLUME -
11	1D	CURSOR RIGHT/VOLUME +
12	8D	CURSOR DOWN
13	1C	MENU
14	0F	SELECT
15	*1	R-CLICK
16	43	FREEZE
17	84/85 *2	LASER
18	8B	NO SHOW
19	59	PAGE +
20	01	D.ZOOM +
21	8A	P-TIMER
22	5A	PAGE -
23	02	D.ZOOM -
24	0B	MUTE
25	18	LAMP CONTROL
26	0C	IMAGE
OB1	*1	□ Back-side Click Trigger Key

*1... Transmit code for Mouse *2... Transmit code to set Laser Pointer / OSD Laser to ON/OFF