

LC-XG400/SXG400 IR Command List

Transmission format of LCD projector operation key

: NEC Format (single command / command pipelining mode)

Transmission format of PC mouse operation button (mouse cursor button) / L / R key

: Interlink Mouse Code Format (Includes 3 bit of ID)

Format for the transmission of OSD Laser operation button (mouse cursor button)

: Interlink OSD Mouse Code Format (Includes 3 bit of ID)

Custom Code + Custom Code

: 8 patterns as below

33h+00h(Default),33h+11h(code2),33h+22h(code3),33h+33h(code4),

33h+44h(code5),33h+55h(code6),33h+66h(code7),33h+77h(code8)

Key No.	Data Code (HEX)	Function
1	*1	L-CLICK Back-side Click Trigger Key
2	11	ON
3	10	OFF
4	38	INPUT1
5	39	INPUT2
6	06	INPUT3
7	89	AUTO PC
8	43	FREEZE
9	16	INFO
10	8C	CURSOR UP
11	1E	CURSOR LEFT/VOLUME-
12	1D	CURSOR RIGHT/VOLUME+
13	8D	CURSOR DOWN
14	1C	MENU
15	0F	SELECT
16	*1	R-CLICK
17	8A	P-TIMER (Number 1)
18	88	D.ZOOM (Number 2)
19	82	SCREEN (Number 3)
20	47	ZOOM (Number 4)
21	4A	FOCUS (Number 5)
22	40	LENS SHIFT (Number 6)
23	46	ZOOM (Number 7)
24	4B	FOCUS (Number 8)
25	5B	KEYSTONE (Number 9)
26	84/85 *2	LASER
27	0B	MUTE (Number 0)
28	8B	NO SHOW
OB1	*1	Mouse Cursor button

*1... Transmit code for Mouse *2... Transmit code to set Laser Pointer / OSD Laser to ON/OFF