

**EXPAND SERIAL COMMAND**  
**FUNCTIONAL SPECIFICATIONS**

**EIKI**

**LC-HDT700**

**Ver.1.00**

**SANYO Electric Co., Ltd  
DS Company  
Projector Division**

**Contents**

<b>1</b>	<b>Overview</b>	10
<b>2</b>	<b>Serial Interface Specification</b>	10
<b>2.1</b>	<b>Transfer Specification</b>	10
<b>2.2</b>	<b>Connection</b>	10
<b>3</b>	<b>Notes for communication</b>	11
<b>4</b>	<b>Notation Convention</b>	11
<b>5</b>	<b>Functional Execution Command Table</b>	12
<b>5.1</b>	<b>Image Command Table</b>	12
<b>5.2</b>	<b>PC Adjust Control Command Table</b>	12
<b>5.3</b>	<b>Input Control Command Table</b>	12
<b>5.4</b>	<b>Screen Control Command Table</b>	13
<b>5.5</b>	<b>Lamp Command Table</b>	13
<b>5.6</b>	<b>Setting Command Table</b>	13
<b>5.7</b>	<b>Other Command Table</b>	14
<b>6</b>	<b>Status Read Command Table</b>	15
<b>6.1</b>	<b>Image Status Read Command Table</b>	15
<b>6.2</b>	<b>PC Adjust Status Read Command Table</b>	15
<b>6.3</b>	<b>Video Status Read Command Table</b>	15
<b>6.4</b>	<b>Input Status Read Command Table</b>	15
<b>6.5</b>	<b>Screen Status Read Command Table</b>	16
<b>6.6</b>	<b>Lamp Status Read Command Table</b>	16
<b>6.7</b>	<b>Setting Status Read Command Table</b>	16
<b>6.8</b>	<b>Other Status Read Command Table</b>	17
<b>7</b>	<b>Error Code Table</b>	18
<b>8</b>	<b>Functional Execution Command</b>	19
<b>8.1</b>	<b>Format</b>	19
<b>8.2</b>	<b>Transfer Example</b>	19
<b>8.3</b>	<b>Operation Requirements</b>	19
1.	Functional Execution Command is limited when the projector status is as below.	19
<b>8.4</b>	<b>Image Command</b>	20
<b>8.4.1</b>	<b>CF_BRIGHT Command</b>	20
<b>8.4.2</b>	<b>CF_CONT Command</b>	20
<b>8.4.3</b>	<b>CF_COLOR Command</b>	20
<b>8.4.4</b>	<b>CF_TINT Command</b>	20
<b>8.4.5</b>	<b>CF_COLMNSAV Command</b>	21
<b>8.4.6</b>	<b>CF_COLMNLD Command</b>	21
<b>8.4.7</b>	<b>CF_SHARP Command</b>	21
<b>8.4.8</b>	<b>CF_GAMMA Command</b>	21
<b>8.4.9</b>	<b>CF_WBAL- Command</b>	22

8.4.10	CF_COLTEMP Command .....	22
8.4.11	CF_OFFSET- Command .....	22
8.4.12	CF_NZRED Command .....	22
8.4.13	CF_PROGV Command.....	23
8.4.14	CF_IMAGE Command.....	23
8.4.15	CF_IMAGEADJ Command .....	24
8.4.16	CF_APCTRL Command.....	24
8.4.17	ADVCOL Command .....	24
8.5	PC Adjust Control Command .....	25
8.5.1	CF_FSYNC Command .....	25
8.5.2	CF_TDOTS Command .....	25
8.5.3	CF_CLPPHASE Command.....	25
8.5.4	CF_H-POS Command .....	26
8.5.5	CF_V-POS Command.....	26
8.5.6	CF_DDOTS Command.....	26
8.5.7	CF_DLINE Command.....	27
8.5.8	CF_SETPCADJ Command .....	27
8.5.9	CF_ORGMODE Command .....	28
8.5.10	CF_PCSTORE Command .....	28
8.5.11	CF_PCMODEFREE Command .....	29
8.6	Input Control Command.....	30
8.6.1	CF_INPUT Command.....	30
8.6.2	CF_SOURCE Command .....	30
8.6.3	CF_INPUT 1 Command.....	31
8.6.4	CF_INPUT 2 Command.....	31
8.6.5	CF_INPUT 3 Command.....	31
8.6.6	CF_INPUT 4 Command.....	31
8.6.7	CF_SYSTEM Command.....	32
8.7	Screen Control Command .....	33
8.7.1	CF_SCREEN Command.....	33
8.7.2	CF_DZCENT Command.....	33
8.7.3	CF_VSCALE Command.....	34
8.7.4	CF_VPOS Command.....	34
8.7.5	CF_HSCALE Command.....	35
8.7.6	CF_HPOS Command .....	35
8.7.7	CF_KEYSTONE Command.....	36
8.7.8	CF_KYSTONMODE Command.....	36
8.7.9	CF_CORNER-UL Command .....	36
8.7.10	CF_CORNER-UR Command .....	37
8.7.11	CF_CORNER-DL Command .....	37

8.7.12	CF_CORNER-DR Command .....	37
8.7.13	CF_CORNERTESTPAT Command.....	38
8.7.14	CF_CEIL Command .....	38
8.7.15	CF_REAR Command .....	38
8.7.16	CF_SCREENASPECT Command.....	38
8.8	Lamp Command .....	39
8.8.1	CF_LAMPH Command.....	39
8.8.2	CF_LAMPMODE Command .....	39
8.9	Setting Command .....	40
8.9.1	CF_LANG Command .....	40
8.9.2	CF_MENUPOSITION Command.....	40
8.9.3	CF_MENUSIZE Command.....	40
8.9.4	CF_INPUTBUTTON Command.....	41
8.9.5	CF_DISP Command .....	41
8.9.6	CF_BACKGND Command .....	41
8.9.7	CF_LOGO Command .....	42
8.9.8	CF_PIP Command .....	42
8.9.9	CF_PIPMODE Command.....	42
8.9.10	CF_PIPMAININP Command.....	43
8.9.11	CF_PIPSUBINPU Command .....	43
8.9.12	CF_PIPSIZE Command.....	43
8.9.13	CF_PIPPOSITION Command .....	44
8.9.14	CF_PIPFRAMELOCK Command.....	44
8.9.15	CF_PIPSTORE Command .....	44
8.9.16	CF_PIPMODEFREE Command .....	45
8.9.17	CF_PIPRST Command.....	45
8.9.18	EDGEBLENDING Command .....	45
8.9.19	BLEND Command .....	45
8.9.20	CF_BLENDSTART Command .....	46
8.9.21	CF_BLENDBLK Command.....	46
8.9.22	CF_BLENDBLKALL Command.....	46
8.9.23	BLENDTESTPAT Command .....	46
8.9.24	CF_BLENDRST Command .....	47
8.9.25	CF_BLENDMENUOFF Command .....	47
8.9.26	CF_BLENDMENU Command .....	47
8.9.27	CF_COLORMATCHING Command .....	47
8.9.28	CMMSXY Command.....	47
8.9.29	CF_CMMSL Command .....	48
8.9.30	CF_CMTGXY Command .....	48
8.9.31	CF_CMTGG Command .....	48

8.9.32	CF_CMAUTOTESTPAT Command .....	48
8.9.33	CF_CMIRST Command.....	49
8.9.34	CF_CMSTORE Command.....	49
8.9.35	CMMSTESTPAT Command .....	49
8.9.36	CF_CMTGTESTPAT Command .....	49
8.9.37	CF_CMFDEFAULT Command .....	50
8.9.38	CF_CMMENUOFF Command .....	50
8.9.39	CF_CMMENU Command .....	50
8.9.40	CF_HDMI SETUP Command .....	50
8.9.41	CF_FILH Command.....	50
8.9.42	CF_FILTIMER Command .....	50
8.9.43	CF_FILCTL Command .....	51
8.9.44	CF_FILSCLR Command .....	51
8.9.45	CF_FANSPEED Command .....	51
8.9.46	CF_SIMPLEMODE Command .....	51
8.9.47	CF_RCODE Command.....	51
8.9.48	CF_RSENS Command .....	52
8.9.49	CF_P-MANE Command .....	52
8.9.50	CF_P-MANETIME Command.....	52
8.9.51	CF_ON-STA Command .....	53
8.9.52	CF_POINTER Command.....	53
8.9.53	CF_PTIMEMODE Command.....	53
8.9.54	CF_PTIMER Command .....	53
8.9.55	CF_PTIME Command.....	53
8.9.56	CF_KEYDIS Command .....	54
8.9.57	CF_PJPINCODE Command.....	54
8.9.58	CF_SHUTPROT Command.....	54
8.9.59	CF_SHUTRELEASE Command.....	55
8.9.60	CF_SHUTH Command .....	55
8.9.61	CF_CCAPTIONDISP Command .....	55
8.9.62	CF_CCAPTIONCOLOR Command.....	55
8.9.63	CF_DELAYCTRL Command .....	56
8.9.64	CF_TESTPAT Command.....	56
8.9.65	CF_FDEFAULT Command .....	56
8.10	Other Commands .....	57
8.10.1	CF_KEYEMU Command .....	57
8.10.2	CF_MENU Command .....	57
8.10.3	CF_POWER Command .....	58
8.10.4	CF_FREEZE Command .....	58
8.10.5	CF_VMUTE Command .....	58

<b>9</b>	<b>Status Read Command .....</b>	<b>59</b>
<b>9.1</b>	<b>Format .....</b>	<b>59</b>
<b>9.2</b>	<b>Transfer Example .....</b>	<b>59</b>
<b>9.3</b>	<b>Operation Condition .....</b>	<b>59</b>
<b>9.4</b>	<b>Image Status Read Command .....</b>	<b>60</b>
<b>9.4.1</b>	<b>CR_BRIGHT Command .....</b>	<b>60</b>
<b>9.4.2</b>	<b>CR_CONT Command .....</b>	<b>60</b>
<b>9.4.3</b>	<b>CR_COLOR Command .....</b>	<b>60</b>
<b>9.4.4</b>	<b>CR_TINT Command .....</b>	<b>60</b>
<b>9.4.5</b>	<b>CR_APCTRL Command.....</b>	<b>60</b>
<b>9.4.6</b>	<b>CR_SHARP Command.....</b>	<b>61</b>
<b>9.4.7</b>	<b>CR_GAMMA Command .....</b>	<b>61</b>
<b>9.4.8</b>	<b>CR_WBAL-R Command.....</b>	<b>61</b>
<b>9.4.9</b>	<b>CR_WBAL-G Command .....</b>	<b>61</b>
<b>9.4.10</b>	<b>CR_WBAL-B Command.....</b>	<b>61</b>
<b>9.4.11</b>	<b>CR_COLTEMP Command.....</b>	<b>62</b>
<b>9.4.12</b>	<b>CR_OFFSET-R Command .....</b>	<b>62</b>
<b>9.4.13</b>	<b>CR_OFFSET-G Command .....</b>	<b>62</b>
<b>9.4.14</b>	<b>CR_OFFSET-B Command .....</b>	<b>62</b>
<b>9.4.15</b>	<b>CR_NZRED Command.....</b>	<b>62</b>
<b>9.4.16</b>	<b>CR_PROGV Command .....</b>	<b>63</b>
<b>9.4.17</b>	<b>CR_IMAGE Command .....</b>	<b>63</b>
<b>9.4.18</b>	<b>CR_IMGGMD Command.....</b>	<b>63</b>
<b>9.4.19</b>	<b>CR_ADVCOL Command .....</b>	<b>63</b>
<b>9.5</b>	<b>PC Adjust Status Read Command .....</b>	<b>64</b>
<b>9.5.1</b>	<b>CR_FSYNC Command .....</b>	<b>64</b>
<b>9.5.2</b>	<b>CR_TDOTS Command .....</b>	<b>64</b>
<b>9.5.3</b>	<b>CR_CLPPHASE Command .....</b>	<b>64</b>
<b>9.5.4</b>	<b>CR_H-POS Command.....</b>	<b>64</b>
<b>9.5.5</b>	<b>CR_V-POS Command .....</b>	<b>64</b>
<b>9.5.6</b>	<b>CR_DDOTS Command.....</b>	<b>65</b>
<b>9.5.7</b>	<b>CR_DLINE Command .....</b>	<b>65</b>
<b>9.5.8</b>	<b>CR_ORGMODE Command .....</b>	<b>66</b>
<b>9.5.9</b>	<b>CR_PCSTORE Command.....</b>	<b>66</b>
<b>9.5.10</b>	<b>CR_SETPCADJ Command .....</b>	<b>67</b>
<b>9.6</b>	<b>Video Status Read Command .....</b>	<b>68</b>
<b>9.6.1</b>	<b>CR_SERSYS Command.....</b>	<b>68</b>
<b>9.7</b>	<b>Input Read Command.....</b>	<b>69</b>
<b>9.7.1</b>	<b>CR_INPUT Command .....</b>	<b>69</b>
<b>9.7.2</b>	<b>CR_SOURCE Command.....</b>	<b>69</b>

9.7.3	CR_SRCINP1 Command.....	69
9.7.4	CR_SRCINP2 Command.....	69
9.7.5	CR_SRCINP3 Command.....	70
9.7.6	CR_SRCINP4 Command.....	70
9.7.7	CR_SYSTEM Command .....	71
9.7.8	CR_SYSLIST Command .....	72
9.7.9	CR_MODELIST Command .....	72
9.7.10	CR_HMSLOT Command .....	73
9.7.11	CR_NMSLOT1 Command.....	73
9.7.12	CR_NMSLOT2 Command.....	73
9.7.13	CR_NMSLOT3 Command.....	73
9.7.14	CR_NMSLOT4 Command.....	73
9.7.15	CR_IDSLOT1 Command.....	74
9.7.16	CR_IDSLOT2 Command.....	74
9.7.17	CR_IDSLOT3 Command.....	74
9.7.18	CR_IDSLOT4 Command.....	74
9.8	Screen Status Read Command.....	75
9.8.1	CR_SCREEN Command .....	75
9.8.2	CR_VSCALE Command.....	75
9.8.3	CR_VPOS Command .....	75
9.8.4	CR_HSCALE Command .....	75
9.8.5	CR_HPOS Command .....	75
9.8.6	CR_KYSTNMODE Command .....	76
9.8.7	CR_CORNERTESTPAT Command .....	76
9.8.8	CR_CEIL Command .....	76
9.8.9	CR_REAR Command .....	76
9.8.10	CR_SCREENASPECT Command .....	76
9.9	Lamp Status Read Command .....	77
9.9.1	CR_LAMPREPL Command .....	77
9.9.2	CR_LAMPH Command .....	77
9.9.3	CR_LAMPCORRESPH Command .....	77
9.9.4	CR_LAMPMODE Command .....	77
9.9.5	CR_LAMPSTS Command .....	77
9.9.6	CR_PROJH Command.....	78
9.9.7	CR_HMLAMP Command .....	78
9.10	Setting Status Read Command .....	79
9.10.1	CR_LANG Command .....	79
9.10.2	CR_MENUSIZE Command .....	79
9.10.3	CR_INPUTBUTTON Command .....	79
9.10.4	CR_DISP Command.....	79

9.10.5 CR_BACKGND Command.....	80
9.10.6 CR_LOGO Command.....	80
9.10.7 CR_LOGOLOCK Command .....	80
9.10.8 CR_PIP Command.....	80
9.10.9 CR_PIPADJ Command .....	80
9.10.10 CR_PIPMODE Command.....	81
9.10.11 CR_PIPMAININP Command .....	81
9.10.12 CR_PIPSUBINPU Command .....	81
9.10.13 CR_PIPSIZE Command .....	81
9.10.14 CR_PIPFRAMELOCK Command .....	82
9.10.15 CR_PIPSTORE Command .....	82
9.10.16 CR_EDGEBLENDING Command .....	82
9.10.17 CR_BLEND Command.....	82
9.10.18 CR_BLENDSTART Command.....	83
9.10.19 CR_BLENDBLK Command .....	83
9.10.20 CR_BLENDTESTPAT Command.....	83
9.10.21 CR_COLORMATCHING Command.....	84
9.10.22 CR_CMMSXY_%1 Command .....	84
9.10.23 CR_CMMSSL_%1 Command.....	84
9.10.24 CR_CMTGXY_%1 Command .....	84
9.10.25 CR_CMTGG_%1 Command .....	85
9.10.26 CR_CMAUTOTESTPAT Command .....	85
9.10.27 CR_CMMSTESTPAT Command .....	85
9.10.28 CR_CMTGTESTPAT Command.....	85
9.10.29 CR_HDMI SETUP Command.....	86
9.10.30 CR_FILREMAIN Command .....	86
9.10.31 CR_FILH Command .....	86
9.10.32 CR_FILTIMER Command.....	86
9.10.33 CR_FILCOND Command .....	86
9.10.34 CR_FILREPL Command .....	86
9.10.35 CR_FANSPEED Command.....	87
9.10.36 CR_SIMPLEMODE Command .....	87
9.10.37 CR_RCODE Command .....	87
9.10.38 CR_RSENS Command.....	87
9.10.39 CR_RTYPE Command .....	87
9.10.40 CR_P-MANE Command .....	88
9.10.41 CR_P-MANETIME Command .....	88
9.10.42 CR_ON-STA Command .....	88
9.10.43 CR_POINTER Command .....	88
9.10.44 CR_PTIMEMODE Command .....	88

9.10.45 CR_PTIMER Command .....	89
9.10.46 CR_PTIME Command .....	89
9.10.47 CR_KEYDIS Command .....	89
9.10.48 CR_SECURITY Command .....	89
9.10.49 CR_PJLOCKNOW Command .....	89
9.10.50 CR_PJLOCKMENU Command .....	90
9.10.51 CR_SHUTPROT Command .....	90
9.10.52 CR_SHUTRELEASE Command .....	90
9.10.53 CR_SHUTH Command .....	90
9.10.54 CR_CCAPTIONDISP Command .....	91
9.10.55 CR_CCAPTIONCOLOR Command .....	91
9.10.56 CR_DELAYCTRL Command .....	91
9.10.57 CR_TESTPAT Command .....	91
9.11 Other Status Read Commands .....	92
9.11.1 CR_STATUS Command .....	92
9.11.2 CR_SIGNAL Command .....	92
9.11.3 CR_VMUTE Command .....	92
9.11.4 CR_FREEZE Command .....	92
9.11.5 CR_TEMPFAIL Command .....	93
9.11.6 CR_TEMP Command .....	94
9.11.7 CR_SHUTCOND Command .....	94
9.11.8 CR_SERIALNO Command .....	94

## 1 Overview

- This Functional Specification defines communication with PJ-Net organizer for PLC-HP7000L.
  - Supporting Firmware Ver. 1.x of the projector.
  - Commands in this document are to communicate with PJ-Net organizer, but most commands are used to control a projector remotely from a computer with RS-232C. Therefore commands in this document are defined as Expand Serial Commands.

## 2 Serial Interface Specification

## 2.1 Transfer Specification


Item	Specification
Synchronous System	Asynchronous
Transmission Speed	9600 / 19200
Data Length	8 bits
Parity	N/A
Stop Bit	1
Flow Control	N/A

Note1) Transmission Speed: initial setting value is 19200

Note2) Transmission Speed can be changed in Service mode.

## 2.2 Connection

Dedicated serial cables must be used for the connection between a computer and a projector.

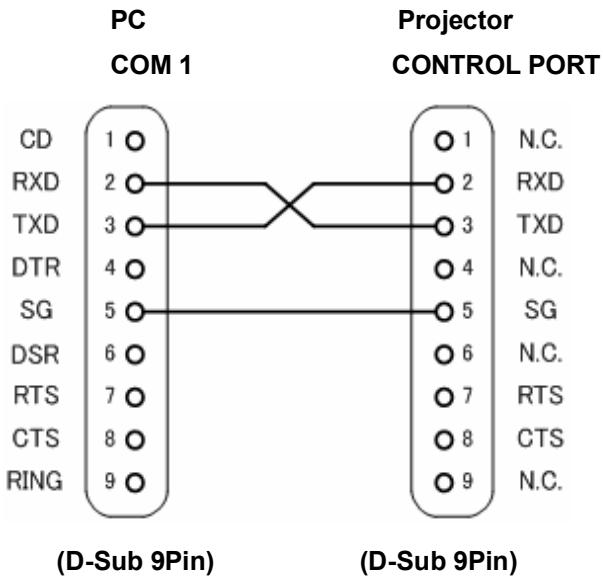


Connect COM port of the computer to CONTROL PORT of the projector.

COM Port (COM1 or COM2) of a computer is specified by control software of the computer.

### 3 Notes for communication

1. Expand Serial Command is defined as a single command per line that starts with "C" and ends with carriage return (0x0D).
2. There are two types of commands; Functional Execution Commands and Status Read Command.
  - Example of Functional Execution Command: "CF\_BRIGHT\_032" [CR]
  - Example of Status Read Command: "CR\_BRIGHT" [CR]

Note) "\_" means a space
3. When it takes more than a second to receive a single command, it is not executed.  
When it takes more than a second to receive carriage return (0x0D) since the reception of the first data "C", it clears the information of the receive buffer.
4. When the command pipelining, allow the interval time of no less than 100ms after receiving return value.

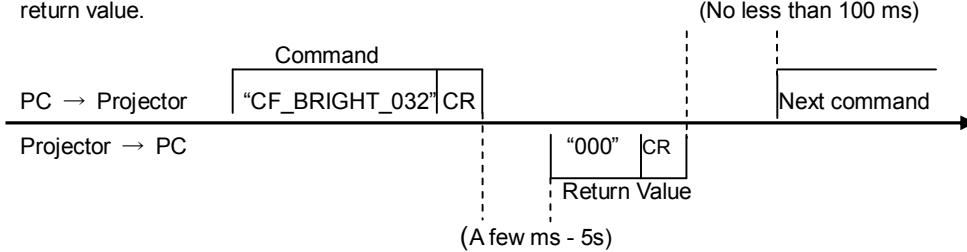

5. Do not send another command before the reception of the return value; the operation by the command is not ensured.  
However this is not the case when no response is returned after more than 5 seconds.
6. It takes about 5 seconds for internal initialization after plugging in AC power. During this time, it cannot process commands. Do not issue any command.

### 4 Notation Convention

1. Data from a controller to a projector is represented as COMMAND, and data from a projector to a controller in response to the incoming command is represented as RESPONSE.
2. [CR]: Carriage Return Code  
Carriage Return code is added to the end of the command.  
Response is also followed by carriage return code.
3. \_: Space Code  
Space Code is represented as (\_).
4. %1: Parameter included in Command  
When there are more than one parameter, they are defined as %2, %3...
5. %%: Error Code returned from a projector  
Acceptable: "000".  
Unacceptable: See [7. Error Code Table].

## 5 Functional Execution Command Table

### 5.1 Image Command Table

Execute command	Item
<b>CF_BRIGHT_%1 [CR]</b>	Set value of Brightness
<b>CF_CONT_%1 [CR]</b>	Set value of Contrast
<b>CF_COLOR_%1 [CR]</b>	Set value of Color
<b>CF_TINT_%1 [CR]</b>	Set value of Tint
<b>CF_COLMNSAV_%1[CR]</b>	Set area to store current values of Color Management
<b>CF_COLMNLD_%1[CR]</b>	Set area to load values of Color Management
<b>CF_APCTRL_%1[CR]</b>	Set level of Auto Picture Control
<b>CF_ADVCOL_%1[CR]</b>	Set mode of Advanced color setting
<b>CF_SHARP_%1 [CR]</b>	Set value of Sharpness
<b>CF_GAMMA_%1 [CR]</b>	Set value of Gamma
<b>CF_WBAL-R_%1 [CR]</b>	Set Red value of White Balance
<b>CF_WBAL-G_%1 [CR]</b>	Set Green value of White Balance
<b>CF_WBAL-B_%1 [CR]</b>	Set Blue value of White Balance
<b>CF_COLTEMP_%1 [CR]</b>	Set level of Color Temperature
<b>CF_OFFSET-R_%1 [CR]</b>	Set Red value of Offset
<b>CF_OFFSET-G_%1 [CR]</b>	Set Green value of Offset
<b>CF_OFFSET-B_%1 [CR]</b>	Set Blue value of Offset
<b>CF_NZRED_%1 [CR]</b>	Set ON/OFF of Noise reduction
<b>CF_PROGV_%1 [CR]</b>	Set mode of Progressive scan
<b>CF_IMAGE_%1 [CR]</b>	Set Image mode
<b>CF_IMAGEADJ_%1 [CR]</b>	Set Store/Reset of values in Image Adjustment

### 5.2 PC Adjust Control Command Table

Execute command	Item
<b>CF_FSYNC_%1 [CR]</b>	Set value of Fine Sync
<b>CF_TDOTS_%1 [CR]</b>	Set value of Total Dots
<b>CF_CLPPHASE_%1 [CR]</b>	Set value of Clamp Phase
<b>CF_H-POS_%1 [CR]</b>	Set value of Horizontal Position
<b>CF_V-POS_%1 [CR]</b>	Set value of Vertical Position
<b>CF_DDOTS_%1 [CR]</b>	Set value of Display Dots
<b>CF_DLNE_%1 [CR]</b>	Set value of Display Line
<b>CF_SETPCADJ_%1 [CR]</b>	Apply values set in PC Adjust menu to screen image
<b>CF_ORGMODE_%1 [CR]</b>	Specify the original signal for PC mode
<b>CF_PCSTORE_%1 [CR]</b>	Store current setting values in PC Adjust menu to Mode %1
<b>CF_PCMODEFREE_%1 [CR]</b>	Delete the values registered in Mode %1 and return it to Free status.

### 5.3 Input Control Command Table

Execute command	Item
<b>CF_INPUT_%1 [CR]</b>	Select Input
<b>CF_SOURCE_%1 [CR]</b>	Select Source of selected Input
<b>CF_INPUT1_%1 [CR]</b>	Select Input1 and also set input source to %1
<b>CF_INPUT2_%1 [CR]</b>	Select Input2 and also set input source to %1
<b>CF_INPUT3_%1 [CR]</b>	Select Input3 and also set input source to %1
<b>CF_INPUT4_%1 [CR]</b>	Select Input4 and also set input source to %1
<b>CF_SYSTEM_%1 [CR]</b>	Select System of currently selected Input

#### 5.4 Screen Control Command Table

Execute command	Item
<b>CF_SCREEN_%1 [CR]</b>	Select Screen size
<b>CF_DZCENT_%1 [CR]</b>	Cancel Digital Zoom mode
<b>CF_VSCALE_%1[CR]</b>	Set V Scale
<b>CF_VPOS_%1[CR]</b>	Set V Position
<b>CF_HSCALE_%1[CR]</b>	Set H Scale
<b>CF_HPOS_%1[CR]</b>	Set H Position
<b>CF_KEYSTONE_%1 [CR]</b>	Set Keystone correction
<b>CF_KYSTNMODE_%1 [CR]</b>	Set Keystone store mode
<b>CF_CORNER-UL_%1[CR]</b>	Correct top-left corner
<b>CF_CORNER-UR_%1[CR]</b>	Correct top-right corner
<b>CF_CORNER-DL_%1[CR]</b>	Correct bottom-left corner
<b>CF_CORNER-DR_%1[CR]</b>	Correct bottom-right corner
<b>CF_CORNERTESTPAT_%1[CR]</b>	Select test pattern for Corner correction.
<b>CF_CEIL_%1 [CR]</b>	Set ON/OFF of Ceiling
<b>CF_REAR_%1 [CR]</b>	Set ON/OFF of Rear
<b>CF_SCREENASPECT_%1 [CR]</b>	Set Screen aspect function

#### 5.5 Lamp Command Table

Execute command	Item
<b>CF_LAMPH_%1[CR]</b>	Reset total running time for each lamp
<b>CF_LAMPMode_%1 [CR]</b>	Select Lamp mode

#### 5.6 Setting Command Table

Execute command	Item
<b>CF_LANG_%1 [CR]</b>	Select language for OSD
<b>CF_MENUPOSITION_%1 [CR]</b>	Select the position of the On-Screen Menu.
<b>CF_MENUSIZE_%1[CR]</b>	Set Menu size
<b>CF_INPUTBUTTON_%1[CR]</b>	Set up Input search function
<b>CF_DISP_%1 [CR]</b>	Set ON/OFF of On Screen Display
<b>CF_BACKGND_%1[CR]</b>	Select screen for no signal
<b>CF_LOGO_%1 [CR]</b>	Set PIN code and mode for Logo
<b>CF_PIP_%1[CR]</b>	Set "Picture in Picture"
<b>CF_PIPMode_%1[CR]</b>	Set mode of "Picture in Picture"
<b>CF_PIPMAININP_%1_%2[CR]</b>	Select Input and Source for "Picture in Picture" (Main picture)
<b>CF_PIPSUBINP_%1_%2[CR]</b>	Select Input and Source for "Picture in Picture" (Sub picture)
<b>CF_PIPSIZE_%1_%2[CR]</b>	Set picture size in "Picture in Picture"
<b>CF_PIPPOSITION_%1[CR]</b>	Set position in "Picture in Picture"
<b>CF_PIPFRAMELOCK_%1[CR]</b>	Set Frame lock in "Picture in Picture"
<b>CF_PIPSTORE_%1[CR]</b>	Store current status in "Picture in Picture" to User1-5
<b>CF_PIPMODEFREE_%1[CR]</b>	Clear registration value in User %1 and return to state of Free.
<b>CF_PIPRST_%1[CR]</b>	Reset setting of "Picture in Picture"
<b>CF_EDGEBLENDING_%1[CR]</b>	Set Edge blending
<b>CF_BLEND_%1_%2[CR]</b>	Set the value of Width for Edge blending
<b>CF_BLENDSTART_%1_%2[CR]</b>	Set the value of Start (Left/Right/Top/Bottom) for Edge blending
<b>CF_BLENDBLK_%1_%2[CR]</b>	Set Black level(R/G/B) for Edge blending
<b>CF_BLENDBLKALL_%1_%2[CR]</b>	Set Black level(ALL) for Edge blending
<b>CF_BLENDTESTPAT_%1[CR]</b>	Set Test pattern for Edge blending
<b>CF_BLENDRST_%1[CR]</b>	Reset Edge blending

CF_BLENDMENUOFF_%1[CR]	Set Menu off function in Edge blending
CF_BLENDMENU_%1[CR]	Select display or erase Edge blending menu.
CF_COLORMATCHING_%1[CR]	Set Color matching
CF_CMMSSXY_%1_%2_%3[CR]	Set "x,y" value of Measured for Color matching
CF_CMMSL_%1_%2[CR]	Set "L" value of Measured for Color matching
CF_CMTGXY_%1_%2_%3[CR]	Set "x,y" value of Target for Color matching
CF_CMTGG_%1_%2[CR]	Set "g" value of Target for Color matching
CF_CMAUTOTESTPAT_%1[CR]	Set Auto test pattern for Color matching
CF_CM_RST_%1[CR]	Reset Color matching
CF_CMSTORE_%1[CR]	Store Color matching
CF_CMMSTESTPAT_%1[CR]	Display Measured Test pattern for Color matching
CF_CMTGTESTPAT_%1[CR]	Display Target Test pattern for Color matching
CF_CMFDEFAULT_%1[CR]	Return the value of Color matching to Factory Default settings.
CF_CMMENUOFF_%1[CR]	Set Menu off function in Color matching
CF_CMMENU_%1[CR]	Select display or erase Color matching menu
CF_HDMISETUP_%1[CR]	Set Image mode of HDMI menu.
CF_FILH_%1[CR]	Reset Filter used time
CF_FILTMR_%1[CR]	Set time to display Filter cleaning / replacement warning on screen
CF_FILCTL_%1[CR]	Execute operation of scroll of filter
CF_FILSCLR_%1[CR]	Reset Filter scroll counter
CF_FANSPEED_%1 [CR]	Set level of Fan Speed
CF_SIMPLEMODE_%1 [CR]	Set Simple mode function
CF_RCODE_%1 [CR]	Select Remote Control Code
CF_RSENS_%1 [CR]	Select location of infrared remote receiver of remote control
CF_P-MANE_%1 [CR]	Set Power Management function
CF_P-MANETIME_%1 [CR]	Set time of Power Management
CF_ON-STA_%1 [CR]	Set Direct on function
CF_POINTER_%1[CR]	Set Pointer function
CF_PTIMEMODE_%1[CR]	Set count up / count down in P-timer function
CF_PTIMER_%1[CR]	Set the status of P-timer
CF_PTIME_%1[CR]	Set the time for count down mode in P-timer function
CF_KEYDIS_%1 [CR]	Prohibit RC/KEY control
CF_PJPINCODE_%1[CR]	Enter PJ PIN code to cancel PJ lock
CF_SHUTPROT_%1[CR]	Set valid / invalid of Side panel or RC key on Shutter control function
CF_SHUTRELEASE_%1[CR]	Set release key of Shutter
CF_SHUTH_%1[CR]	Set time of operating shutter management function
CF_CCAPTIONDISP_%1[CR]	Set channel of Closed caption
CF_CCAPTIONCOLOR_%1 [CR]	Set color of Closed caption
CF_DELAYCTRL_%1[CR]	Set Video delay control function
CF_TESTPAT_%1[CR]	Set Test pattern display function
CF_FDEFAULT_%1 [CR]	Reset to Factory Default settings

## 5.7 Other Command Table

Execute command	Item
CF_KEYEMU_%1 [CR]	The same operation as Control Key
CF_MENU_%1 [CR]	Set ON/OFF of Menu
CF_POWER_%1 [CR]	Set ON/OFF of Power
CF_FREEZE_%1 [CR]	Set ON/OFF of Freeze
CF_VMUTE_%1 [CR]	Set ON/OFF of Video Mute

## 6 Status Read Command Table

### 6.1 Image Status Read Command Table

Status Read command	Item
<b>CR_BRIGHT [CR]</b>	Get value of Brightness
<b>CR_CONT [CR]</b>	Get value of Contrast
<b>CR_COLOR [CR]</b>	Get value of Color
<b>CR_TINT [CR]</b>	Get value of Tint
<b>CR_IRIS [CR]</b>	Get setting status of Iris function
<b>CR_SHARP [CR]</b>	Get value of Sharpness
<b>CR_GAMMA [CR]</b>	Get value of Gamma
<b>CR_WBAL-R [CR]</b>	Get Red value of White Balance
<b>CR_WBAL-G [CR]</b>	Get Green value of White Balance
<b>CR_WBAL-B [CR]</b>	Get Blue value of White Balance
<b>CR_COLTEMP [CR]</b>	Get value of Color temperature
<b>CR_OFFSET-R[CR]</b>	Get Offset Red
<b>CR_OFFSET-G[CR]</b>	Get Offset Green
<b>CR_OFFSET-B[CR]</b>	Get Offset Blue
<b>CR_NZRED [CR]</b>	Get setting status of Noise reduction
<b>CR_PROGV [CR]</b>	Get setting status of Progressive scan
<b>CR_IMAGE [CR]</b>	Get Selected Image status
<b>CR_IMGGMD [CR]</b>	Get setting value of Image Gamma
<b>CR_APCTRL</b>	Get setting status of Auto Picture Control
<b>CR_ADVCOL [CR]</b>	Get setting status of Advanced color

### 6.2 PC Adjust Status Read Command Table

Status Read command	Item
<b>CR_FSYNC [CR]</b>	Get setting value of Fine Sync
<b>CR_TDOTS [CR]</b>	Get setting value of Total Dots
<b>CR_CLPPHASE [CR]</b>	Get setting value of Clamp phase
<b>CR_H-POS [CR]</b>	Get setting value of Horizontal Position
<b>CR_V-POS [CR]</b>	Get setting value of Vertical Position
<b>CR_DDOTS [CR]</b>	Get setting value of Display Dots
<b>CR_DLNE [CR]</b>	Get setting value of Display Line
<b>CR_ORGMODE [CR]</b>	Get the original signal for PC-Adjusted mode
<b>CR_PCSTORE [CR]</b>	Get status Free/ Stored for PC Adj. mode 1-10
<b>CR_SETPCADJ [CR]</b>	Get currently displayed PC signal in system

### 6.3 Video Status Read Command Table

Status Read command	Item
<b>CR_SERSYS [CR]</b>	Get currently selected signal. In Auto mode, it returns a result by Auto detection.

### 6.4 Input Status Read Command Table

Status Read command	Item
<b>CR_INPUT [CR]</b>	Get selected Input
<b>CR_SOURCE [CR]</b>	Get selected Source
<b>CR_SRCINP1 [CR]</b>	Get selected source for Input 1
<b>CR_SRCINP2 [CR]</b>	Get selected source for Input 2
<b>CR_SRCINP3 [CR]</b>	Get selected source for Input 3
<b>CR_SRCINP4 [CR]</b>	Get selected source for Input 4
<b>CR_SYSTEM [CR]</b>	Get selected system in current Input mode
<b>CR_SYSLIST [CR]</b>	Get possible system list
<b>CR_MODELIST [CR]</b>	Get possible mode list
<b>CR_HMSLOT [CR]</b>	Get total number of Inputs
<b>CR_NMSLOT1 [CR]</b>	Get terminal information of Input1.

<b>CR_NMSLOT2[CR]</b>	Get terminal information of Input2.
<b>CR_NMSLOT3[CR]</b>	Get terminal information of Input3
<b>CR_NMSLOT4[CR]</b>	Get terminal information of Input4.
<b>CR_IDSLOT1[CR]</b>	Get ID information of Input1
<b>CR_IDSLOT2[CR]</b>	Get ID information of Input2
<b>CR_IDSLOT3[CR]</b>	Get ID information of Input3
<b>CR_IDSLOT4[CR]</b>	Get ID information of Input4

#### 6.5 Screen Status Read Command Table

Status Read command	Item
<b>CR_SCREEN [CR]</b>	Get selected screen size
<b>CR_VSCALE[CR]</b>	Get setting status of V Scale
<b>CR_VPOS[CR]</b>	Get setting status of V Position
<b>CR_HSCALE[CR]</b>	Get setting status of H Scale
<b>CR_HPOS[CR]</b>	Get setting status of H Position
<b>CR_KYSTNMODE[CR]</b>	Get selected Keystone store mode
<b>CR_CORNERTESTPAT [CR]</b>	Get setting of test pattern for Corner correction.
<b>CR_CEIL [CR]</b>	Get setting status of Ceiling
<b>CR_REAR [CR]</b>	Get setting status of Rear
<b>CR_SCREENASPECT[CR]</b>	Get setting status of Screen aspect

#### 6.6 Lamp Status Read Command Table

Status Read command	Item
<b>CR_LAMPREPL [CR]</b>	Get information of Lamp replacement time
<b>CR_LAMPH [CR]</b>	Get information of actual Lamp running time
<b>CR_LAMPCORRESPH [CR]</b>	Get lamp running time multiplied by a coefficient
<b>CR_LAMPMODE [CR]</b>	Get selected Lamp mode
<b>CR_LAMPSTS [CR]</b>	Get status of the Lamp
<b>CR_PROJH [CR]</b>	Get total running time of projector
<b>CR_HMLAMP [CR]</b>	Get the total number of lamps

#### 6.7 Setting Status Read Command Table

Status Read command	Item
<b>CR_LANG [CR]</b>	Get selected language
<b>CR_MENUSIZE [CR]</b>	Get setting status of Menu size
<b>CR_INPUTBUTTON [CR]</b>	Get setting status of Input button function
<b>CR_DISP [CR]</b>	Get setting status of Display
<b>CR_BACKGND [CR]</b>	Get setting status of Screen for no signal
<b>CR_LOGO [CR]</b>	Get setting status of Logo
<b>CR_LOGOLOCK[CR]</b>	Get setting status of Logo Lock
<b>CR_PIP[CR]</b>	Get setting status of "Picture in Picture"
<b>CR_PIPADJ[CR]</b>	Get status of User1-User5 in "Picture in Picture".
<b>CR_PIPMODE[CR]</b>	Get setting status of Mode in "Picture in Picture"
<b>CR_PIPMAININP[CR]</b>	Get setting status of Input / Source for "Picture in Picture" (Main picture)
<b>CR_PIPSUBINP[CR]</b>	Get setting status of Input / Source for "Picture in Picture" (Sub picture)
<b>CR_PIPSIZE[CR]</b>	Get picture size in "Picture in Picture"
<b>CR_PIPFRAMELOCK[CR]</b>	Get setting status of Frame lock in "Picture in Picture"
<b>CR_PIPSTORE[CR]</b>	Get stored status in "Picture in Picture"
<b>CR_EDGEBLENDING[CR]</b>	Get setting status of Edge blending
<b>CR_BLEND[CR]</b>	Get value of Width in Edge blending
<b>CR_BLENDSTART[CR]</b>	Get value of Start set in Edge blending
<b>CR_BLENDBLK[CR]</b>	Get setting status of Black level of Edge blending
<b>CR_BLENDTESTPAT[CR]</b>	Get setting status of Test pattern of Edge blending

<b>CR_COLORMATCHING [CR]</b>	Get setting status of Color matching
<b>CR_CMMSSXY_%1[CR]</b>	Get "x", "y" value of Measured of Color matching
<b>CR_CMMSL_%1[CR]</b>	Get "L" value of Measured of Color matching
<b>CR_CMTGXY_%1[CR]</b>	Get "x", "y" value of Target of Color matching
<b>CR_CMTGG_%1[CR]</b>	Get "g" value of Target of Color matching
<b>CR_CMAUTOTESTPAT [CR]</b>	Get setting status of Auto test pattern of Color matching
<b>CR_CMMSTESTPAT[CR]</b>	Get setting status of test pattern(Measured) of Color matching
<b>CR_CMTGTESTPAT[CR]</b>	Get setting status of test pattern(Target) of Color matching
<b>CR_HDMISETUP[CR]</b>	Get status of Image mode of HDMI setup.
<b>CR_FILREMAIN[CR]</b>	Get remaining number of usable Filter scroll
<b>CR_FILH[CR]</b>	Get Filter used time
<b>CR_FILTIMER[CR]</b>	Get time to display Filter cleaning / replacement warning on screen
<b>CR_FILCOND[CR]</b>	Get status of filter clog
<b>CR_FILREPL[CR]</b>	Get status of Filter cleaning / replacement time
<b>CR_FANSPEED [CR]</b>	Get selected Fan Control Speed
<b>CR_SIMPLEMODE [CR]</b>	Get selected mode in Simple mode function
<b>CR_RCODE [CR]</b>	Get selected Remote Control code
<b>CR_RSENS [CR]</b>	Get selected location of infrared remote receiver of remote control
<b>CR_RTYPE [CR]</b>	Get supported Remote Control type (IR/RF)
<b>CR_P-MANE [CR]</b>	Get Power management setting status
<b>CR_P-MANETIME [CR]</b>	Get setting time for Power Management
<b>CR_ON-STA [CR]</b>	Get setting status of Direct on
<b>CR_POINTER[CR]</b>	Get setting status of Pointer
<b>CR_PTIMEMODE[CR]</b>	Get setting mode of P-timer
<b>CR_PTIMER[CR]</b>	Get status of P-timer
<b>CR_PTIME[CR]</b>	Get setting time for count down mode in P-timer
<b>CR_KEYDIS [CR]</b>	Get RC(KEY prohibited status
<b>CR_SECURITY [CR]</b>	Get setting status of Security
<b>CR_PJLOCKNOW [CR]</b>	Get setting status of current PJ Lock
<b>CR_PJLOCKMENU [CR]</b>	Get PJ Lock setting status on the menu
<b>CR_SHUTPROT[CR]</b>	Get disability state of Side panel and RC key for controlling shutter
<b>CR_SHUTRELEASE[CR]</b>	Get setting status of release key of shutter
<b>CR_SHUTH[CR]</b>	Get time setting to begin the shutter management
<b>CR_CCAPTIONDISP[CR]</b>	Get setting status of channel of Closed caption
<b>CR_CCAPTIONCOLOR [CR]</b>	Get setting status of color of Closed caption
<b>CR_DELAYCTRL[CR]</b>	Get selected mode of Video delay control
<b>CR_TESTPAT[CR]</b>	Get setting status of Test pattern

## 6.8 Other Status Read Command Table

Status Read command	Item
<b>CR_STATUS [CR]</b>	Get operating status of Projector
<b>CR_SIGNAL [CR]</b>	Get status of signal existence
<b>CR_VMUTE [CR]</b>	Get setting status of video mute
<b>CR_FREEZE [CR]</b>	Get setting status of Freeze
<b>CR_TEMPFAIL [CR]</b>	Get temperature when sensors approach abnormal temperature
<b>CR_TEMP [CR]</b>	Get current temperature
<b>CR_SHUTCOND [CR]</b>	Get setting status of Shutter
<b>CR_SERIALNO [CR]</b>	Get value of SERIAL NO.

## 7 Error Code Table

Error Code	Contents
?	-When the received data cannot be decoded -Parameter designation error (wrong digit number, including invalid value, etc.)
000	Normal reception (This is "Not" error)
101	The function is not available in the selected Mode
102	Selected value is out of range (Not reflected)
103	Command mismatched to Hardware (the command is for Optional function which is not implemented)
201	Incremented or decremented value or values are beyond upper or lower limits.
301	Not executable due to screen capturing in process. Prompting reissue of the command after a while.
402	Not executable due to PIN code in operation. Prompting reissue of the command after a while.

Note) These error codes are applied to Expand Command, not to Basic Command

## 8 Functional Execution Command

### 8.1 Format

1) PC issues commands in format as below:

**Pattern1: "CF\_ COMMAND" [CR]**

**Pattern2: "CF\_ COMMAND \_" %1 [CR]**

CF\_: Header

COMMAND: String

%1: Parameter (String)

\_: Space (To separate COMMAND and Parameter)

2) The projector decodes the received command and when it is ready to receive the next command, it returns the response.

**"000" [CR]**: (0x06,0x0D) When receiving Functional Execution Command

**"nnn" [CR]**: Except "000", when it is unable to execute command for any specific reason.

See Error Code Table for details

3) When the received data cannot be decoded, the projector returns "?" [CR]

### 8.2 Transfer Example

When setting projector's total dots to 1344 by Expand Serial command

PC → PJ: "CF\_TDOTS\_1344" [CR]

PC → PJ: "000" [CR] - ----- Acceptable

### 8.3 Operation Requirements

1. Functional Execution Command is limited when the projector status is as below.

However, Status Read Command is still effective under following conditions.

Projector Status	Available Functional Execution Command
Standby Mode	C00: Power ON CF POWER ON
Countdown in process	C00: Power ON CF POWER ON (Terminates Count Down)
Cooling Down in process	N/A
Cooling Down due to Abnormal Temperature	N/A
Abnormal Temperature	N/A
Power Failure (60 seconds after Power failure occurred)	N/A
Abnormal Filter	N/A
Power-Save Cooling Down in process	N/A
Cooling Down in process due to Shutter management	N/A
Power Save in process	C00: Power ON C01: Power OFF CF POWER ON CF POWER OFF

Note) When projector receives another command in the above status, it returns error code which shows the status.

## 8.4 Image Command

### 8.4.1 CF\_BRIGHT Command

Command	“CF_BRIGHT_%1” [CR]	
%1	“000-063”-----	Directly specify setting value of Brightness
	“UP”-----	Increment setting value of Brightness by 1
	“DN”-----	Decrement setting value of Brightness by 1
Details	<p>Set user controlled value of Brightness (Available only in the normal Power ON status)</p> <p>The value set by this command will not be stored in the projector's memory. Therefore, when the power is turned to ALL OFF status, the value returns to the original setting. (It is stored in Suspend mode.)</p>	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

### 8.4.2 CF\_CONT Command

Command	“CF_CONT_%1” [CR]	
%1	“000-063”-----	Directly specify setting value of Contrast
	“UP”-----	Increment setting value of Contrast by 1
	“DN”-----	Decrement setting value of Contrast by 1
Details	<p>Set user controlled value of Contrast (Available only in the normal Power ON status)</p> <p>The value set by this command will not be stored in the projector. Therefore, when the power is turned to ALL OFF status, the value returns to the original setting. (It is stored in Suspend mode.)</p>	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

### 8.4.3 CF\_COLOR Command

Command	“CF_COLOR_%1” [CR]	
%1	“000-063”-----	Directly specify setting value of Color
	“UP”-----	Increment setting value of Color by 1
	“DN”-----	Decrement setting value of Color by 1
Details	<p>Set user controlled value of Color (Available only in the normal Power ON status)</p> <p>The value set by this command will not be stored in the projector's memory. Therefore, when the power is turned to ALL OFF status, the value returns to the original setting. (It is stored in Suspend mode.)</p>	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

### 8.4.4 CF\_TINT Command

Command	“CF_TINT_%1” [CR]	
%1	“000-063”-----	Directly specify setting value of Tint
	“UP”-----	Increment setting value of Tint by 1
	“DN”-----	Decrement setting value of Tint by 1
Details	<p>Set Tint value (Available only in the normal Power ON status)</p> <p>The value set by this command will not be saved to the projector's memory. Therefore, when the power is turned to ALL OFF status, the value returns to the original setting. (It is stored in Suspend mode.)</p>	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

**8.4.5 CF\_COLMNSAV Command**

Command	"CF_COLMNSAV_%1" [CR]	
%1	"000 – 009" ----- Specify the area to store	
Details	Store current setting status of Color Management to the area specified in %1. (Available only in the normal Power ON status)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

**8.4.6 CF\_COLMNLD Command**

Command	"CF_COLMNLD_%1" [CR]	
%1	"000 – 009" ----- Specify the area to store	
Details	Retrieve Color Management setting status from the area specified in %1. (Available only in the normal Power ON status)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

**8.4.7 CF\_SHARP Command**

Command	"CF_SHARP_%1" [CR]	
%1	"000-031"----- Directly specify setting value of Sharpness "UP"----- Increment setting value of Sharpness by 1 "DN"----- Decrement setting value of Sharpness by 1	
Details	Set user controlled value of Sharpness (Available only in the normal Power ON status) The value set by this command will not be stored in the projector's memory. Therefore, when the power is turned to ALL OFF status, the value returns to the original setting. (It is stored in Suspend mode.)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

**8.4.8 CF\_GAMMA Command**

Command	"CF_GAMMA_%1" [CR]	
%1	"000-015"----- Directly specify setting value of Gamma "UP"----- Increment setting value of Gamma by 1 "DN"----- Decrement setting value of Gamma by 1	
Details	Set user controlled value of Gamma (Available only in the normal Power ON status) The value set by this command will not be stored in the projector's memory. Therefore, when the power is turned to ALL OFF status, the value returns to the original setting. (It is stored in Suspend mode.)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

**8.4.9 CF\_WBAL- Command**

Command	"CF_WBAL-%1_%2" [CR]	
%1	"R" ----- RED "G" ----- GREEN "B" ----- BLUE	
%2	"000-063"----- Directly specify value of Color selected in %1 of White Balance. "UP"----- Increment setting value of Color specified in %1 of White Balance by 1 "DN"----- Decrement setting value of Color specified in %1 of White Balance by 1	
Details	Set value of Color specified in %1 of White Balance (Available only in the normal Power ON status) The value set by this command will not be stored in the projector's memory. Therefore, when the power is turned to ALL OFF status, the value returns to the original setting. (It is stored in Suspend mode.)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code"[CR]

**8.4.10 CF\_COLTEMP Command**

Command	"CF_COLTEMP_%1" [CR]	
%1	"000" ----- Xlow "001"----- Low "002"----- Mid "003"----- High	
Details	Set Color Temperature The value set by this command will not be stored in the projector's memory. Therefore, when the power is turned to ALL OFF status, the value returns to the original setting. (It is stored in Suspend mode.)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

**8.4.11 CF\_OFFSET- Command**

Command	"CF_OFFSET-%1_%2" [CR]	
%1	"R" ----- RED "G" ----- GREEN "B" ----- BLUE	
%2	"000-063"----- Directly specify value of Color selected in %1 of Offset. "UP"----- Increment setting value of Color specified in %1 of Offset by 1 "DN"----- Decrement setting value of Color specified in %1 of Offset by 1	
Details	Set value of Color specified in %1 of Offset (Available only in the normal Power ON status) The value set by this command will not be stored in the projector's memory. Therefore, when the power is turned to ALL OFF status, the value returns to the original setting. (It is stored in Suspend mode.)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code"[CR]

**8.4.12 CF\_NZRED Command**

Command	"CF_NZRED_%1" [CR]	
%1	"OFF" ----- Cancel Noise Reduction "ON" ----- Set Noise Reduction "UP" ----- The same operation as pressing Up key or Left key "DN" ----- The same operation as pressing Down key or Right key	

	* "UP" and "DN" are exactly same operation.	
Details	Set Noise Reduction level (Available only in the normal Power ON status) The value set by this command will not be stored in the projector's memory Therefore, when the power is turned to ALL OFF status, the value returns to the original setting. (It returns to the original setting in Suspend mode as well.)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

#### 8.4.13 CF\_PROGV Command

Command	"CF_PROGV_%1" [CR]	
%1	"ON" ----- Set Progressive scan to On. "FILM" ----- Set Progressive scan to Film. "OFF" ----- Set Progressive scan to OFF. "UP" ----- The same operation as pressing Up key or Left key "DN" ----- The same operation as pressing Down key or Right key	
Details	Set Progressive scan mode. (Available only in the normal Power ON status) The value set by this command will not be stored in the projector's memory. Therefore, when the power is turned to ALL OFF status, the value returns to the original setting. (It is stored in Suspend mode.)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

#### 8.4.14 CF\_IMAGE Command

Command	"CF_IMAGE_%1" [CR]	
%1	"DYNAMIC" --- Dynamic (Fixed value to enable projection with a sharp, powerful picture tone) "STAND" ----- Standard(Image adjust value is set to factory default for Still Image) "REAL"----- Real (Fixed value to display graphic image with natural tone) "NATURAL"--- Natural (Fixed value to provide image with more natural color and tone) "CINEMA"----- Cinema (Fixed value to focus on tone reproduction for movie) "CUSTOM1" ----- Image1 (the value adjusted and stored by user) "CUSTOM2" ----- Image2 (the value adjusted and stored by user) "CUSTOM3" ----- Image3 (the value adjusted and stored by user) "CUSTOM4" ----- Image4 (the value adjusted and stored by user) "CUSTOM5" ----- Image5 (the value adjusted and stored by user) "CUSTOM6" ----- Image6 (the value adjusted and stored by user) "CUSTOM7" ----- Image7 (the value adjusted and stored by user) "CUSTOM8" ----- Image8 (the value adjusted and stored by user) "CUSTOM9" ----- Image9 (the value adjusted and stored by user) "CUSTOM10" ----- Image10 (the value adjusted and stored by user)	
Details	Select Image Mode (Available only in the normal Power ON status) Parameter "CUSTOM1" to "CUSTOM10" corresponds to "Image1" to "Image10" displayed in projector OSD menu on selecting Image. The value set by this command is stored in EEPROM so that the setting can remain effective even after the power is turned to ALL OFF status.	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

**8.4.15 CF\_IMAGEADJ Command**

Command	"CF_IMAGEADJ_%1"[CR]	
%1	"RST"----- Reset adjusted value for the Image "STR1"----- Store current adjusted value to Image 1 "STR2"----- Store current adjusted value to Image 2 "STR3"----- Store current adjusted value to Image 3 "STR4"----- Store current adjusted value to Image 4 "STR5"----- Store current adjusted value to Image 5 "STR6"----- Store current adjusted value to Image 6 "STR7"----- Store current adjusted value to Image 7 "STR8"----- Store current adjusted value to Image 8 "STR9"----- Store current adjusted value to Image 9 "STR10"----- Store current adjusted value to Image 10	
Details	Reset or Store adjusted value for Image. (Available only in the normal Power ON status) "STR1"-“STR10” corresponds to “Image1”-“Image10” displayed in projector OSD menu on selecting “Store” for adjusted value of Image. The setting value set in “Image1” to “Image10” is stored and can be retrieved when turning on the projector again after the power is turned to ALL OFF status.	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

**8.4.16 CF\_APCTRL Command**

Command	"CF_APCTRL_%1" [CR]	
%1	"L1" ----- Set Auto Picture Control to Level 1. "L2" ----- Set Auto Picture Control to Level 2. "OFF" ----- Set Auto Picture Control OFF. "UP" ----- The same operation as pressing Up key or Left key "DN" -----The same operation as pressing Down key or Right key	
Details	Set Auto Picture Control (Available only in the normal Power ON status) The value set by this command is not stored in the projector's memory. Therefore, when the power is turned to ALL OFF status, the value returns to the original setting. (It is stored in Suspend mode.)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

**8.4.17 ADVCOL Command**

Command	"CF_ADVCOL_%1" [CR]	
%1	"AUTO" ----- Set Advanced color to Auto "OFF" ----- Set Advanced color OFF. "UP" ----- The same operation as pressing Up key or Left key "DN" -----The same operation as pressing Down key or Right key *"UP" and "DN" are exactly same operation.	
Details	Set Advanced color mode (Available only in the normal Power ON status) The value set by this command is not stored in the projector's memory. Therefore, when the power is turned to ALL OFF status, the value returns to the original setting. (It is stored in Suspend mode.)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

## 8.5 PC Adjust Control Command

### 8.5.1 CF\_FSYNC Command

Command	“CF_FSYNC_%1” [CR]	
%1	“0000-0031” ----- Directly specify setting value of Fine Sync “UP” ----- Increment setting value of Fine Sync by 1 “DN” ----- Decrement setting value of Fine Sync by 1	
Details	Set value of Fine Sync in PC signal (Available only in the normal Power ON status) The value set by this command will not be stored in the projector's memory. Therefore, when the power is turned to ALL OFF status, the value returns to the original setting.	
Response	Acceptable	“000” [CR]
	Unacceptable	“101” [CR] --- When input is Video signal --- When input is no signal

### 8.5.2 CF\_TDOTS Command

Command	“CF_TDOTS_%1” [CR]	
%1	“mmmm - nnnn” ----- Directly specify setting value of Total Dots “mmmm” indicates minimum value, which is current (Display area H + Position H) value “nnnn” indicates maximum value, which is <i>less than 140 MHz in Dot Clocks</i> “UP” ----- Increment setting value of Total Dots by 1 “DN” ----- Decrement setting value of Total Dots by 1	
Details	Set value of Total Dots in PC signal (Available only in the normal Power ON status) The value set by this command will not be stored in the projector's memory. Therefore, when the power is turned to ALL OFF status, the value returns to the original setting.	
Response	Acceptable	“000” [CR]
	Unacceptable	“101” [CR] --- When input is Video signal --- When input is no signal

### 8.5.3 CF\_CLPPHASE Command

Command	“CF_CLPPHASE_%1” [CR]	
%1	“0000-0255” ----- Directly specify setting value of Clamp Phase “UP” ----- Increment setting value of Clamp Phase by 1 “DN” ----- Decrement setting value of Clamp Phase by 1	
Details	Set value of Clamp Phase (Available only in the normal Power ON status) The value set by this command will not be stored in the projector. Therefore, when the power is turned to ALL OFF, the value returns to the original setting.	
Response	Acceptable	“000” [CR]
	Unacceptable	“101” [CR] --- When input is Video signal --- When input is no signal

#### 8.5.4 CF\_H-POS Command

Command	“CF_H-POS_%1” [CR]	
%1	“0000-nnnn” ----- Directly specify setting value of Horizontal Position “nnnn” indicates maximum value, which is current value of (Total dots - Display area H) “UP” ----- Increment setting value of Horizontal Position by 1 “DN” ----- Decrement setting value of Horizontal Position by 1	
Details	Set value of Horizontal Position in PC signal (Available only in the normal Power ON status) The value set by this command will not be stored in the projector's memory. Therefore, when the power is turned to ALL OFF status, the value returns to the original setting.	
Response	Acceptable	“000” [CR]
	Unacceptable	“101” [CR] --- When input is Video signal --- When input is no signal

#### 8.5.5 CF\_V-POS Command

Command	“CF_V-POS_%1” [CR]	
%1	“0000-nnnn” ----- Directly specify setting value of Vertical Position “nnnn” indicates maximum value, which is current (Total Line – Display Area V) value “UP” ----- Increment setting value of Vertical Position by 1 “DN” ----- Decrement setting value of Vertical Position by 1	
Details	Set Vertical Position value (Available only in the normal Power ON status) The value set by this command will not be stored in the projector's memory. Therefore, when the power is turned to ALL OFF status, the value returns to the original setting.	
Response	Acceptable	“000” [CR]
	Unacceptable	“101” [CR] --- When input is Video signal --- When input is no signal

#### 8.5.6 CF\_DDOTS Command

Command	“CF_DDOTS_%1” [CR]	
%1	“0100-nnnn” ----- Directly specify setting value of Display Dots “nnnn” indicates maximum value, which is current value of (Total Dots - Position H). In this projector, the value should be “even number” and if “odd number” is specified, it adds 1 to make the value even number. “UP” ----- Increment setting value of Display Dots by 2 “DN” ----- Decrement setting value of Display Dots by 2	
Details	Set setting value of Display Dots in PC signal (Available only in the normal Power ON status) The value set by this command will not be stored in the projector's memory. Therefore, when the power is turned to ALL OFF status, the value returns to the original setting.	
Response	Acceptable	“000” [CR]
	Unacceptable	“101” [CR] --- When input is Video signal --- When input is no signal

### 8.5.7 CF\_DLNE Command

Command	"CF_DLNE_%1" [CR]	
%1	"0100-nnnn" ----- Directly specify setting value of Display Line "nnnn" indicates maximum value, which is current value of (Total Line - Position V). "UP" ----- Increment setting value of Display Line by 1 "DN" ----- Decrement setting value of Display line by 1	
Details	Set setting value of Display Line in PC signal (Available only in the normal Power ON status) The value set by this command will not be stored in the projector's memory. Therefore, when the power is turned to ALL OFF status, the value returns to the original setting.	
Response	Acceptable	"000" [CR]
	Unacceptable	"101" [CR] --- When input is Video signal --- When input is no signal

### 8.5.8 CF\_SETPCADJ Command

Command	"CF_SETPCADJ_%1" [CR]	
%1	None "EXT11-60"	
Details	1. Apply setting value of PC adj. to the projecting image. Projecting image can be corrected with this command as well as when PC control command and Screen control command below directly apply its value to the image. (Available only in the normal Power ON status) <ul style="list-style-type: none"> <li>• CF_FSYNC</li> <li>• CF_TDOTS</li> <li>• CF_CLAMPPAHSE</li> <li>• CF_H-POS</li> <li>• CF_V-POS</li> <li>• CF_DDOTS</li> <li>• CF_DLNE</li> </ul> 2. When "EXT11-60" is specified in %1, "Ex Mode" (not like XGA1) is displayed in "SYSTEM" menu.	
Response	Acceptable	"000" [CR]
	Unacceptable	"101" [CR] --- When input is Video signal --- When input is no signal

**8.5.9 CF\_ORGMODE Command**

Command	“CF_ORGMODE_%1” [CR]					
%1	When input signal is PC Analog; “VGA1” ----- Specify VGA1 “VGA2” ----- Specify VGA2 : “XGA1” ----- Specify XGA1 : “WXGA3” ----- Specify WXGA3 “1080i60” ----- Specify 1080i60 “1080i50” ----- Specify 1080i50 “1035i” ----- Specify 10350i “720P60” ----- Specify 720p60 “720P50” ----- Specify 720p50 “575P” ----- Specify 575p “480P” ----- Specify 480p “575i” ----- Specify 575i “480i” ----- Specify 480i “1080PSF/24” ----- Specify 1080psf/24 “1080PSF/25” ----- Specify 1080psf/25 “1080PSF/30” ----- Specify 1080psf/30 “1080P24” ----- Specify 1080p24 “1080P25” ----- Specify 1080p25 “1080P30” ----- Specify 1080p30 “1080P50” ----- Specify 1080p50 “1080P60” ----- Specify 1080p60					
Details	After “EXT n” is set by PC control command such as CF_FSYNC/CF_TDOTS and CF_SETPCADJ command, specify the signal originated with by issuing this command. This command is used to specify projector internal settings such as whether or not to get PC signal through IP (Available only in the normal Power ON status) Note; To differentiate between 60Hz and 50Hz in 1080i and 720p, “60” or “50” is necessary to add to the parameter in this command.					
Response	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 2px;">Acceptable</td> <td style="padding: 2px;">“000” [CR]</td> </tr> <tr> <td style="padding: 2px;">Unacceptable</td> <td style="padding: 2px;">“101” [CR] --- When input isn't PC analog</td> </tr> </table>		Acceptable	“000” [CR]	Unacceptable	“101” [CR] --- When input isn't PC analog
Acceptable	“000” [CR]					
Unacceptable	“101” [CR] --- When input isn't PC analog					

**8.5.10 CF\_PCSTORE Command**

Command	“CF_PCSTORE_%1” [CR]					
%1	“1” ----- Store current value of PC Adjust to Mode1 “2” ----- Store current value of PC Adjust to Mode2 “3” ----- Store current value of PC Adjust to Mode3 “4” ----- Store current value of PC Adjust to Mode4 “5” ----- Store current value of PC Adjust to Mode5 “6” ----- Store current value of PC Adjust to Mode6 “7” ----- Store current value of PC Adjust to Mode7 “8” ----- Store current value of PC Adjust to Mode8 “9” ----- Store current value of PC Adjust to Mode9 “10” ----- Store current value of PC Adjust to Mode10					
Details	Store current value of PC Adjust (each parameter status such as Total dots) to Mode1-10. This command operates the same way as storing to Mode1-10 in PC Adjust Menu. (Available only in the normal Power ON status)					
Response	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 2px;">Acceptable</td> <td style="padding: 2px;">“000” [CR]</td> </tr> <tr> <td style="padding: 2px;">Unacceptable</td> <td style="padding: 2px;">“101” [CR] --- When input is Video signal --- When input is no signal</td> </tr> </table>		Acceptable	“000” [CR]	Unacceptable	“101” [CR] --- When input is Video signal --- When input is no signal
Acceptable	“000” [CR]					
Unacceptable	“101” [CR] --- When input is Video signal --- When input is no signal					

### 8.5.11 CF\_PCMODEFREE Command

Command	“CF_PCMODEFREE_%1” [CR]					
%1	“1” ----- Set Mode1 to Free status “2” ----- Set Mode2 to Free status “3” ----- Set Mode3 to Free status “4” ----- Set Mode4 to Free status “5” ----- Set Mode5 to Free status “6” ----- Set Mode6 to Free status “7” ----- Set Mode7 to Free status “8” ----- Set Mode8 to Free status “9” ----- Set Mode9 to Free status “10” ----- Set Mode10 to Free status					
Details	Delete the data registered in Custom Mode1–10 and returns it to Free status. This command operates the same way as storing to Mode1-10 in PC Adjust Menu. (Available only in the normal Power ON status)					
Response	<table border="1"> <tr> <td>Acceptable</td> <td>“000” [CR]</td> </tr> <tr> <td>Unacceptable</td> <td>“101” [CR] -- When input is Video signal -- When input is no signal</td> </tr> </table>		Acceptable	“000” [CR]	Unacceptable	“101” [CR] -- When input is Video signal -- When input is no signal
Acceptable	“000” [CR]					
Unacceptable	“101” [CR] -- When input is Video signal -- When input is no signal					

## 8.6 Input Control Command

### 8.6.1 CF\_INPUT Command

Command	“CF_INPUT_%1” [CR]	
%1	“1” ----- Select Input 1 (not switching Source) “2” ----- Select Input 2 (not switching Source) “3” ----- Select Input 3 (not switching Source) “4” ----- Select Input 4 (Network viewer) “UP” ----- Increment Input No. by 1 “UP” ----- The same operation as pressing Up key or Left key “DN” ----- The same operation as pressing Down key or Right key	
Details	Select Input (Available only in the normal Power ON status) This command switches only Input No, not Source. For instance, when Input 1 has been selected, receiving the command to select Input 1 does not invoke source-switching operation. That means it operates differently from “INPUT” button of Projector or Remote Control. *When selecting Input4 on a projector with PJ-Net unattached, it comes to “103”. *When selecting Input4 on a projector with PJ-Net attached and power OFF, It comes to “101”.	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

### 8.6.2 CF\_SOURCE Command

Command	“CF_SOURCE_%1” [CR]	
%1	Input 1	“DIGITAL” ----- Select RGB (PC Digital) Input “ANALOG” ----- Select RGB (PC Analog) Input “SCART” ----- Select RGB (Scart) input “HDCP” ----- Select RGB (AV HDCP) input “HDMI” ----- Select HDMI input “UP” ----- The same operation as pressing Up key or Left key “DN” ----- The same operation as pressing Down key or Right key
	Input 2	“VIDEO” ----- Select Video input “YPBPR” ----- Select Y, Pb/Cb, Pr/Cr Input “YCBCR” ----- Select Y, Pb/Cb, Pr/Cr Input “ANALOG” ----- Select RGB input “UP” ----- The same operation as pressing Up key or Left key “DN” ----- The same operation as pressing Down key or Right key
	Input 3	“VIDEO” ----- Select Video input “S-VIDEO” ----- Select S-Video input “YPBPR” ----- Select Y, Pb/Cb, Pr/Cr Input “YCBCR” ----- Select Y, Pb/Cb, Pr/Cr Input “UP” ----- The same operation as pressing Up key or Left key “DN” ----- The same operation as pressing Down key or Right key
	Input 4	“NETWORK” “UP” “DN” *Input can not be selected, but above parameter is processed as acceptable.
Details	Select Source of currently selected Input (Available only in the normal Power ON status) When selected input does not include specified %1, error code “101” is returned and it is not executed. When Input No is 4 and PJ-Net power is OFF, error code “101” is returned.	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

### 8.6.3 CF\_INPUT 1 Command

Command	“CF_INPUT1_%1” [CR]	
%1	“DIGITAL” ----- Select PC Digital Input “ANALOG” ----- Select PC Analog Input “SCART” ----- Select SCART Input “HDCP” ----- Select DVI HDCP Input “HDMI” ----- Select HDMI Input	
Details	Select Input 1 as well as Source specified in %1 (Available only in the normal Power ON status)	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

### 8.6.4 CF\_INPUT 2 Command

Command	“CF_INPUT2_%1” [CR]	
%1	“VIDEO” ----- Select Composite Video Input “YPBPR” ----- Select Y, Pb/Cb, Pr/Cr Input “YCBCR” ----- Select Y, Pb/Cb, Pr/Cr Input “ANALOG” ----- Select RGB Input	
Details	Select Input 2 as well as Source specified in %1. (Available only in the normal Power ON status)	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

### 8.6.5 CF\_INPUT 3 Command

Command	“CF_INPUT3_%1” [CR]	
%1	“VIDEO” ----- Select Composite Video Input “S-VIDEO” ----- Select S-Video Input “YPBPR” ----- Select Y, Pb/Cb, Pr/Cr Input “YCBCR” ----- Select Y, Pb/Cb, Pr/Cr Input	
Details	Select Input 3 as well as Source specified in %1. (Available only in the normal Power ON status)	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

### 8.6.6 CF\_INPUT 4 Command

Command	“CF_INPUT4_%1” [CR]	
%1	“NETWORK” ----- Select input from PJ-Net	
Details	Select Input 4 as well as Source specified in %1. (Available only in the normal Power ON status) *With PJ-Net unattached, this command is invalid and error code “103” is returned. *With PJ-Net attached and the power OFF, error code “101” is returned.	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

### 8.6.7 CF\_SYSTEM Command

	Command	"CF_SYSTEM_%1" [CR]
%1	Input is PC Analog	<p>"VGA1" ----- Select VGA1          "VGA2" ----- Select VGA2          :          "XGA1" ----- Select XGA1          :          "WXGA3" ----- Select WXGA3          "1080P" ----- Select 1080p          "1080I" ----- Select 1080i          "1035I" ----- Select 1035i          "720P" ----- Select 720p          "575P" ----- Select 575p          "480P" ----- Select 480p          "575I" ----- Select 575i          "480I" ----- Select 480i          "1080PSF/24" ----- Select 1080psf/24          "1080PSF/25" ----- Select 1080psf/25          "1080PSF/30" ----- Select 1080psf/30          "MODE1 - 10" ----- Select MODE1 – MODE10          "EXT11 - 60" ----- Select Ex Mode11-60          * EX1-10 is not returned.</p>
		<p>"D-XGA1" ----- Select D-XGA1          :          "D-WXGA3" ----- Select D-WXGA3          "D-1080P" ----- Select D-1080p          "D-1080I" ----- Select D-1080i          "D-1035I" ----- Select D-1035i          "D-720P" ----- Select D-720p          "D-575P" ----- Select D-575p          "D-480P" ----- Select D-480p          "D-1080PSF/24" ----- Select D-1080psf/24          "D-1080PSF/25" ----- Select D-1080psf/25          "D-1080PSF/30" ----- Select D-1080psf/30</p>
	Input is Y,Pb/Cb,Pr/Cr	<p>"AUTO" ----- Select System "Auto"          "1080P" ----- Select 1080p          "1080I" ----- Select 1080i          "1035I" ----- Select 1035i          "720P" ----- Select 720p          "575P" ----- Select 575p          "480P" ----- Select 480p          "575I" ----- Select 575i          "480I" ----- Select 480i</p>
		<p>"AUTO" ----- Select System "Auto"          "NTSC" ----- Select NTSC          "NTSC443" ----- Select NTSC4.43          "PAL" ----- Select PAL          "SECAM" ----- Select SECAM          "PAL-M" ----- Select PAL-M          "PAL-N" ----- Select PAL-N</p>
Details	<p>Select System of currently selected Input          (Available only in the normal Power ON status)          When selected input does not include specified %1, error code "101" [CR] is returned and it is not executed.          When Input No is 4, error code "101" [CR] is returned and it is not executed.</p>	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

## 8.7 Screen Control Command

### 8.7.1 CF\_SCREEN Command

Command	“CF_SCREEN_%1” [CR]	
%1	Input is Computer	“NORMAL” ----- Select Normal mode “FULL” ----- Select Full screen mode “WIDE” ----- Select Wide(16:9) mode “ZOOM” ----- Select Zoom mode “TRUE” ----- Select True mode “CUSTOM” ----- Select Custom mode “DZOOM_UP” ----- Scale up with Digital zoom “DZOOM_DN” ----- Scale down with Digital zoom “UP” ----- The same operation as pressing Up key or Left key “DN” -----The same operation as pressing Down key or Right key
		“NORMAL” ----- Select Normal mode “FULL” ----- Select Full screen mode “WIDE” ----- Select Wide(16:9) mode “ZOOM” ----- Select Zoom mode “NATURAL” ----- Select Natural wide mode “CUSTOM” ----- Select Custom mode “UP” ----- The same operation as pressing Up key or Left key “DN” -----The same operation as pressing Down key or Right key
	Common in AV/PC	“RST” ----- Reset Screen adjustment
Details	Select screen size (Available only in the normal Power ON status) When selected input does not include specified %1, error code “101” [CR] is returned and it is not executed. Receiving “DZOOM_UP” or “DZOOM_DN” command immediately executes the function.	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

### 8.7.2 CF\_DZCENT Command

Command	“CF_DZCENT_%1” [CR]	
%1	“CENT” ----- Cancel Digital Zoom (CENT: “CENTER”)	
Details	Cancel Digital Zoom (Available only in the normal Power ON status and Input for Computer is selected) Release the image setting in case the image is enlarged or reduced.	
Response	Acceptable	“000” [CR]
	Unacceptable	“101” [CR] ----- When input is Video

### 8.7.3 CF\_VSCALE Command

Command	“CF_VSCALE_%1” [CR]	
%1	“035” ----- +35 “031” ----- +31 : “002” ----- +2 “001” ----- +1 “000” ----- ±0 “ - 01” ----- - 1 “ - 02” ----- - 2 : “ - 31” ----- - 31 “ - 32” ----- - 32 “UP” ----- Increment setting value of Vscale by 1 “DN” ----- Decrement setting value of Vscale by 1	
Details	Set Vscale (Available only in the normal Power ON status) *When the screen mode is not in “Custom”, projector changes image mode into Custom by receiving this command. *When there is no signal detected, projector returns 101 and the command does not execute.	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

### 8.7.4 CF\_VPOS Command

Command	“CF_VPOS_%1” [CR]	
%1	“015” ----- +15 “014” ----- +14 : “002” ----- +2 “001” ----- +1 “000” ----- ±0 “ - 01” ----- - 1 “ - 02” ----- - 2 : “ - 14” ----- - 14 “ - 15” ----- - 15 “UP” ----- Increment setting value of Vposition by 1 “DN” ----- Decrement setting value of Vposition by 1	
Details	Set V Position (Available only in the normal Power ON status) *When the screen mode is not in “Custom”, projector changes image mode into Custom by receiving this command. *When there is no signal detected, projector returns 101 and the command does not execute.	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

### 8.7.5 CF\_HSCALE Command

Command	“CF_HSCALE_%1” [CR]	
%1	“035” ----- +35 “031” ----- +31 : “002” ----- +2 “001” ----- +1 “000” ----- ±0 “ - 01” ----- - 1 “ - 02” ----- - 2 : “ - 31” ----- - 31 “ - 32” ----- - 32 “UP” ----- Increment setting value of Hscale by 1 “DN” ----- Decrement setting value of Hscale by 1	
Details	Set Hscale (Available only in the normal Power ON status) *When the screen mode is not in “Custom”, projector changes image mode into Custom by receiving this command. *When there is no signal detected, projector returns 101 and the command does not execute.	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

### 8.7.6 CF\_HPOS Command

Command	“CF_HPOS_%1” [CR]	
%1	“015” ----- +15 “014” ----- +14 : “002” ----- +2 “001” ----- +1 “000” ----- ±0 “ - 01” ----- - 1 “ - 02” ----- - 2 : “ - 14” ----- - 14 “ - 15” ----- - 15 “UP” ----- Increment setting value of Hposition by 1 “DN” ----- Decrement setting value of Hposition by 1	
Details	Set H Position (Available only in the normal Power ON status) *When the screen mode is not in “Custom”, projector changes image mode into Custom by receiving this command. *When there is no signal detected, projector returns 101 and the command does not execute.	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

### 8.7.7 CF\_KEYSTONE Command

Command	"CF_KEYSTONE _%1" [CR]	
%1	"UP" ----- Correct Keystone distortion to reduce upper part of image "FUP" ----- Correct Keystone distortion to reduce upper part by 2 steps "DN" ----- Correct Keystone distortion to reduce lower part of image "FDN" ----- Correct Keystone distortion to reduce lower part by 2 steps "LEFT" ----- Correct Keystone distortion to reduce left part of image "FLFT" ----- Correct Keystone distortion to reduce left part by 2 steps "RIGHT" ----- Correct Keystone distortion to reduce right part of image "FRGT" ----- Correct Keystone distortion to reduce right part by 2 steps "RST" ----- Return Keystone and Corner to default setting	
Details	Change level of Keystone distortion correction (Available only in the normal Power ON status). When reached the limit of the correction level, projector accepts the command but does not execute it. Receiving this command immediately invokes the operation. When trying to set the value beyond available range, error code "201" is returned and the operation is not executed. Example 1: When the correction level of the right part has reached its upper limit and then the command "RIGHT" is received Example 2: When the upper part correction allows only another step, and then the command "FUP" is received.	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

### 8.7.8 CF\_KYSTONMODE Command

Command	"CF_KYSTONMODE _%1" [CR]	
%1	"STR" ----- Set Keystone store mode to Store "RST" ----- Set Keystone store mode to Reset	
Details	Set Keystone or Corner store mode (Available only in the normal Power ON status)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

### 8.7.9 CF\_CORNER-UL Command

Command	"CF_CORNER-UL_%1"[CR]	
%1	"UP" ----- Correct the horizontal line of image upwards "DN" ----- Correct the horizontal line of image downwards "LEFT" ----- Correct the vertical line of image to the left "RIGHT" ----- Correct the vertical line of image to the right	
Details	Correct the top-left corner of the image. (Available in normal Power ON status only) The correction starts with the first command received  Projector returns error code "101" and no operation is made when exceeding the correction limit,	
Response	Acceptable	"000"[CR]
	Unacceptable	"Error Code"[CR]

### 8.7.10 CF\_CORNER-UR Command

Command	“CF_CORNER-UR_%1”[CR]	
%1	“UP” ----- Correct the horizontal line of image upwards “DN” ----- Correct the horizontal line of image downwards “LEFT” ----- Correct the vertical line of image to the left “RIGHT” ----- Correct the vertical line of image to the right	
Details	Correct the top-right corner of the image. (Available in normal Power ON status only) The correction starts with the first command received  Projector returns error code “101 and no operation is made when exceeding the correction limit,	
Response	Acceptable   “000”[CR] Unacceptable   “Error Code”[CR]	

### 8.7.11 CF\_CORNER-DL Command

Command	“CF_CORNER-DL%1”[CR]	
%1	“UP” ----- Correct the horizontal line of image upwards “DN” ----- Correct the horizontal line of image downwards “LEFT” ----- Correct the vertical line of image to the left “RIGHT” ----- Correct the vertical line of image to the right	
Details	Correct the bottom-left corner of the image. (Available in normal Power ON status only) The correction starts with the first command received  Projector returns error code “101 and no operation is made when exceeding the correction limit,	
Response	Acceptable   “000”[CR] Unacceptable   “Error Code”[CR]	

### 8.7.12 CF\_CORNER-DR Command

Command	“CF_CORNER-DR_%1”[CR]	
%1	“UP” ----- Correct the horizontal line of image upwards “DN” ----- Correct the horizontal line of image downwards “LEFT” ----- Correct the vertical line of image to the left “RIGHT” ----- Correct the vertical line of image to the right	
Details	Correct the bottom-right corner of the image. (Available in normal Power ON status only) The correction starts with the first command received  Projector returns error code “101 and no operation is made when exceeding the correction limit,	
Response	Acceptable   “000”[CR] Unacceptable   “Error Code”[CR]	

**8.7.13 CF\_CORNERTESTPAT Command**

Command	“CF_CORNERTESTPAT_%1”[CR]	
%1	“RED” ----- Select Red “WHITE” ----- Select White “BLUE” ----- Select Blue “OFF” ----- Select Off	
Details	Display test patterns for Corner correction. (Available in normal Power ON status only) The value set by this command is stored in EEPROM and its setting is effective even after ALL is OFF.	
Response	Acceptable	“000”[CR]
	Unacceptable	“Error Code”[CR]

**8.7.14 CF\_CEIL Command**

Command	“CF_CEIL_%1” [CR]	
%1	“ON” ----- Set Ceiling to ON. “OFF” ----- Set Ceiling to OFF.	
Details	Set/Cancel Ceiling mode.(Available only in the normal Power ON status) The status set by this command is stored in EEPROM and setting remains effective even after the power is turned to ALL OFF status.	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

**8.7.15 CF\_REAR Command**

Command	“CF_REAR_%1” [CR]	
%1	“ON” ----- Set Rear to ON. “OFF” ----- Set Rear to OFF.	
Details	Set/Cancel Rear mode (Available only in the normal Power ON status) When Rear is ON, projected image is left/right reversed. The status set by this command is stored in EEPROM and setting remains effective even after the power is turned to ALL OFF status.	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

**8.7.16 CF\_SCREENASPECT Command**

Command	“CF_SCREENASPECT_%1”[CR]	
%1	“43MODE” ..... Select 4:3 mode “169MODE” ..... Select 16:9 mode “1610MODE” ..... Select 16:10 mode	
Details	Set Screen aspect mode. This command is available in normal Power ON status.	
Response	Acceptable	“000”[CR]
	Unacceptable	“Error Code”[CR]

## 8.8 Lamp Command

### 8.8.1 CF\_LAMPH Command

Command	“CF_LAMPH_%1” [CR]	
%1	“RST”	
Details	Reset lamp running time (Available only in the normal Power ON status)	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

### 8.8.2 CF\_LAMPMode Command

Command	“CF_LAMPMode_%1” [CR]	
%1	“NORMAL” ----- Set Lamp status to Normal mode “ECO1” ----- Set Lamp status to Eco1 mode “ECO2” ----- Set Lamp status to Eco2 mode “AUTO” ----- Set Lamp status to Auto mode	
Details	Select Lamp mode (Available only in the normal Power ON status) The value set by this command is stored in EEPROM and the setting remains effective after the power is turned to ALL OFF status.	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

## 8.9 Setting Command

### 8.9.1 CF\_LANG Command

Command	"CF_LANG_%1" [CR]	
%1	"ENG"	Select ENGLISH
	"DEU"	Select German
	"FRA"	Select French
	"ITA"	Select Italian
	"ESP"	Select Spanish
	"POR"	Select Portuguese
	"NED"	Select Dutch
	"SVE"	Select Swedish
	"JPN"	Select Japanese
	"CHI"	Select Chinese
	"KOR"	Select Korean
	"RUS"	Select Russian
Details	Set language for OSD (Available only in the normal Power ON status) The language set by this command is stored in EEPROM and setting remains effective even after the power is turned to ALL OFF status.	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

### 8.9.2 CF\_MENUPOSITION Command

Command	"CF_MENUPOSITION_%1" [CR]	
%1	"UP"	Move Menu position to upper side.
	"DN"	Move Menu position to lower side.
	"LEFT"	Move Menu position to left side.
	"RIGHT"	Move Menu position to right side.
Details	Move Menu position. (Valid only when in the normal Power ON status.) This function is worked from the first reception of Command. * When setting beyond the area of movement is carried out, return "101" [CR] and the command is not executed. Ex.) When movement to right side has already reached limit; and "RIGHT" is received.	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

### 8.9.3 CF\_MENUSIZE Command

Command	"CF_MENUSIZE_%1" [CR]	
%1	"NORMAL"	Select Menu size to Normal.
	"DOUBLE"	Select Menu size to Double.
Details	Select Menu size. (Valid only when in the normal Power ON status.) The status set by this command is stored in EEPROM and the setting remains even after the power is turned to ALL OFF status.	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

**8.9.4 CF\_INPUTBUTTON Command**

Command	“CF_INPUTBUTTON_%1” [CR]	
%1	“MODE1” ----- Set Input button operation to MODE1 “MODE2” ----- Set Input button operation to MODE2 “MODE3” ----- Set Input button operation to MODE3	
Details	Set Input button operation mode. (Available in normal Power ON status only). The status set by this command is stored in EEPROM and its setting is effective after ALL is OFF	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

**8.9.5 CF\_DISP Command**

Command	“CF_DISP_%1” [CR]	
%1	“ON” ----- Set Display to On “CNTDWNOFF” ---- Set Display to Count down Off “OFF” ----- Set Display to Off “UP” ----- The same operation as pressing Up key or Left key “DN” -----The same operation as pressing Down key or Right key	
Details	Set Display mode.(Available only in the normal Power ON status) The value set by this command is stored in EEPROM and setting remains effective even after the power is turned to ALL OFF status.	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

**8.9.6 CF\_BACKGND Command**

Command	“CF_BACKGND_%1” [CR]	
%1	“BLUE” ----- Select Blue Back “USER” ----- Select User “BLACK” ----- Select Black Back “UP” ----- The same operation as pressing Up key or Left key “DN” -----The same operation as pressing Down key or Right key	
Details	Set Screen status for no signal. (Available only in the normal Power ON status) The status set by this command is stored in EEPROM and the setting remains even after the power is turned to ALL OFF status. *When %1=“USER” is received, error code “101” is returned, in the case of Capture non-practice.	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

### 8.9.7 CF\_LOGO Command

Command	“CF_LOGO_%1_%2” [CR]	
%1	“0000 – 9999” ----- Directly set Logo PIN code	
%2	<p>“OFF” ----- Cancel Logo display          “DFLT” ----- Select Logo of Factory Default          “USER” ----- Select User          “UP” ----- The same operation as pressing Up key or Left key          “DN” ----- The same operation as pressing Down key or Right key</p>	
Details	<p>Set Logo mode.(Available only in the normal Power ON status)          The status set by this command is stored in EEPROM and setting remains effective even after the power is turned to ALL OFF status.          Set Logo PIN code in %1.</p> <p>When Logo Lock is enabled:          PIN code is matched ----- Command is valid (Acceptable)          PIN code is mismatched----- Command is invalid (Error code “102”)          PIN code is beyond %1 available range -----Command is invalid (Error code “?”)</p> <p>When Logo Lock is disabled:          PIN code is within %1 available range ----- Command is valid (Acceptable)          PIN code is out of %1 available range ----- Command is invalid (Error code “?”)</p> <p>Note: When Logo Lock is enabled, matching Logo PIN code switches Logo but Logo Lock is not cancelled (Lock status is kept).</p> <p>*When %2=“USER” is received, error code “101” is returned, in the case of Capture non-practice.</p>	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

### 8.9.8 CF\_PIP Command

Command	“CF_PIP_%1” [CR]	
%1	<p>“OFF” ----- Select Off          “USER1” ----- Select User1          “USER2” ----- Select User2          “USER3” ----- Select User3          “USER4” ----- Select User4          “USER5” ----- Select User5</p>	
Details	<p>Set “Picture in Picture” status.(Available only in the normal Power ON status)          The status set by this command is stored in EEPROM and the setting remains even after the power is turned to ALL OFF status.</p>	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

### 8.9.9 CF\_PIPMODE Command

Command	“CF_PIPMODE_%1” [CR]	
%1	<p>“PINP” ----- Select P in P mode          “PBYP” ----- Select P by P mode</p>	
Details	Set mode in “Picture in Picture”. (Available only in the normal Power ON status)	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

**8.9.10 CF\_PIPMAININP Command**

Command	“CF_PIPMAININP_%1_%2” [CR]	
%1	“1” ----- Select Input 1 “2” ----- Select Input 2 “3” ----- Select Input 3	
%2	“DIGITAL” ----- Select DVI Input “ANALOG” ----- Select Analog Input “VIDEO” ----- Select Composite Video Input “S-VIDEO” ----- Select S-Video input “YPBPR” ----- Select Y, Pb/Cb, Pr/Cr Input “YCBCR” ----- Select Y, Pb/Cb, Pr/Cr Input “SCART” ----- Select SCART Input “HDCP” ----- Select HDCP Input “HDMI” ----- Select HDMI Input	
Details	Select input and source of Main picture of “Picture in Picture”. (Valid only when in the normal Power ON status.)	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

**8.9.11 CF\_PIPSUBINPU Command**

Command	“CF_PIPSUBINP_%1_%2” [CR]	
%1	“1” ----- Select Input 1 “2” ----- Select Input 2 “3” ----- Select Input 3	
%2	“DIGITAL” ----- Select DVI Input “ANALOG” ----- Select Analog Input “VIDEO” ----- Select Composite Video Input “S-VIDEO” ----- Select S-Video input “YPBPR” ----- Select Y, Pb/Cb, Pr/Cr Input “YCBCR” ----- Select Y, Pb/Cb, Pr/Cr Input “SCART” ----- Select SCART Input “HDCP” ----- Select HDCP Input “HDMI” ----- Select HDMI Input	
Details	Select input and source of Sub picture of “Picture in Picture”. (Valid only when in the normal Power ON status.)	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

**8.9.12 CF\_PIPSIZE Command**

Command	“CF_PIPSIZE_%1_%2” [CR]	
%1	“1” ----- Set main picture size to 10% “2” ----- Set main picture size to 20% “3” ----- Set main picture size to 30% “4” ----- Set main picture size to 40% “5” ----- Set main picture size to 50% “6” ----- Set main picture size to 60% “7” ----- Set main picture size to 70% “8” ----- Set main picture size to 80% “9” ----- Set main picture size to 90% “10” ----- Set main picture size to 100%	
%2	“1” ----- Set sub picture size to 10% “2” ----- Set sub picture size to 20% “3” ----- Set sub picture size to 30% “4” ----- Set sub picture size to 40% “5” ----- Set sub picture size to 50%	
Details	Set display size of “Picture in Picture”.	

	(Valid only when in the normal Power ON status.) *When "Picture in Picture" is set to Off, return "101" [CR]	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

### 8.9.13 CF\_PIPPOSITION Command

Command	"CF_PIPPOSITION_%1" [CR]	
%1	"POS1" ----- Move main picture position to up "POS2" ----- Move main picture position to down "POS3" ----- Move main picture position to left "POS4" ----- Move main picture position to right "POS5" ----- Move sub picture position to up "POS6" ----- Move sub picture position to down "POS7" ----- Move sub picture position to left "POS8" ----- Move sub picture position to right	
Details	Set position of "Picture in Picture". (Valid only when in the normal Power ON status.) This function is worked from the first reception of Command.  * When setting beyond the area of movement is carried out, return Error Code "101" [CR] and the command is not executed. Ex.) When movement to right side has already reached limit; and "RIGHT" is received. *When "Picture in Picture" is set to Off, return "101" [CR]	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

### 8.9.14 CF\_PIPFRAMELOCK Command

Command	"CF_PIPFRAMELOCK_%1" [CR]	
%1	"MAIN" ----- Set to main picture "SUB" ----- Set to sub picture	
Details	Set Frame lock of "Picture in Picture". (Valid only when in the normal Power ON status.)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

### 8.9.15 CF\_PIPSTORE Command

Command	"CF_PIPSTORE_%1" [CR]	
%1	"USER1"---- Store current setting status to User 1 "USER2"---- Store current setting status to User 2 "USER3"---- Store current setting status to User 3 "USER4"---- Store current setting status to User 4 "USER5"---- Store current setting status to User 5	
Details	Store setting status of "Picture in Picture". (Valid only when in the normal Power ON status.) This command operates the same way as storing to User1-5 in "Picture in Picture" Menu. The status set by this command is stored in EEPROM and the setting remains even after the power is turned to ALL OFF status.	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

**8.9.16 CF\_PIPMODEFREE Command**

Command	“CF_PIPMODEFREE_%1” [CR]	
%1	“USER1” ----- Set User1 to Free status “USER 2” ----- Set User2 to Free status “USER 3” ----- Set User3 to Free status “USER 4” ----- Set User4 to Free status “USER 5” ----- Set User5 to Free status	
Details	Delete the data registered in Custom User1–5 and returns it to Free status. This command operates the same way as setting Mode free for User1-5 in “Picture in Picture” Menu. (Available only in the normal Power ON status) *When there is only one user mode of stored state, return “101” [CR]	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

**8.9.17 CF\_PIPRST Command**

Command	“CF_PIPRST_%1” [CR]	
%1	“RST” ----- Reset current setting status	
Details	Reset current setting status of “Picture in Picture”. (Available only in the normal Power ON status)	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

**8.9.18 EDGEBLENDING Command**

Command	“CF_EDGEBLENDING_%1” [CR]	
%1	“ON” ----- Set Edge blending to On “OFF” ----- Set Edge blending to Off	
Details	Set Edge blending.(Available only in the normal Power ON status) The status set by this command is stored in EEPROM and setting remains effective even after the power is turned to ALL OFF status.	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

**8.9.19 BLEND Command**

Command	“CF_BLEND_%1_%2” [CR]	
%1	“LEFT” ----- Left side “RIGHT” ----- Right side “TOP” ----- Upper side “BOTTOM” ----- Lower side	
%2	“000”-“1024”----- Directly specify value of direction of %1 *Value of upper limit changes by choice of %1 Left ----- 000~0960 Right ----- 000~0960 Top ----- 000~540 Bottom ----- 000~540	
Details	Set the value of Width for direction specified by Edge blending %1. (Available only in the normal Power ON status) The status set by this command is stored in EEPROM and setting remains effective even after the power is turned to ALL OFF status.	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

**8.9.20 CF\_BLENDSTART Command**

Command	“CF_BLENDSTART_%1_%2” [CR]	
%1	“LEFT” ----- Left side “RIGHT” ----- Right side “TOP” ----- Upper side “BOTTOM” ----- Lower side	
%2	“000”~“1024”----- Directly specify value of direction of %1 *Value of upper limit changes by choice of %1 Left ----- 000~0960 Right ----- 000~0960 Top ----- 000~540 Bottom ----- 000~540	
Details	Set the value of Start (Left/Right/Top/Bottom) for direction specified by Edge blending %1. (Available only in the normal Power ON status) The status set by this command is stored in EEPROM and setting remains effective even after the power is turned to ALL OFF status.	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

**8.9.21 CF\_BLENDBLK Command**

Command	“CF_BLENDBLK_%1_%2” [CR]	
%1	“R” ----- Red “G” ----- Green “B” ----- Blue	
%2	“-127” ~ “0127”----- Directly specify value of color of %1	
Details	Set value of color specified by Edge blending %1. (Available only in the normal Power ON status) The status set by this command is stored in EEPROM and setting remains effective even after the power is turned to ALL OFF status.	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

**8.9.22 CF\_BLENDBLKALL Command**

Command	“CF_BLENDBLKALL_%1” [CR]	
%1	“UP” ----- Increment value of Black level(R/G/B) by 1 “DN” ----- Decrement value of Black level(R/G/B) by 1	
Details	Set value of all of Black level of Edge blending. (Available only in the normal Power ON status) The status set by this command is stored in EEPROM and setting remains effective even after the power is turned to ALL OFF status.	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

**8.9.23 BLENDESTPAT Command**

Command	“CF_BLENDESTPAT_%1” [CR]	
%1	“ON” ----- Set to On “OFF” ----- Set to Off	
Details	Set Test pattern of Edge blending.(Available only in the normal Power ON status) The status set by this command is stored in EEPROM and setting remains effective even after the power is turned to ALL OFF status.	

Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

#### 8.9.24 CF\_BLENDRST Command

Command	“CF_BLENDRST_%1” [CR]	
%1	“RST” ----- Reset current setting status	
Details	Reset current setting status of Edge blending. (Available only in the normal Power ON status)	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

#### 8.9.25 CF\_BLENDMENUOFF Command

Command	“CF_BLENDMENUOFF_%1” [CR]	
%1	“SET” ----- Temporarily hide Edge blending menu and edge line “RST” ----- Display Edge blending menu and edge line	
Details	Set Menu off function of Edge blending. (Available only in the normal Power ON status)	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

#### 8.9.26 CF\_BLENDMENU Command

Command	“CF_BLENDMENU_%1” [CR]	
%1	“ON” ----- Display Edge blending menu and edge line. “OFF” ----- Set Edge blending menu and edge line undisplayed.	
Details	Set Edge blending menu and edge line displayed or undisplayed. (Available only in the normal Power ON status)	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

#### 8.9.27 CF\_COLORMATCHING Command

Command	“CF_COLORMATCHING_%1” [CR]	
%1	“ON” ----- Set to On “OFF” ----- Set to Off	
Details	Set status of Color matching. (Available only in the normal Power ON status) The status set by this command is stored in EEPROM and setting remains effective even after the power is turned to ALL OFF status.	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

#### 8.9.28 CMMSXY Command

Command	“CF_CMMSXY_%1_%2_%3” [CR]	
%1	“RED” ----- Set value of Red “GREEN” ----- Set value of Green “BLUE” ----- Set value of Blue	
%2	“0000” – “1000” ----- Directly specify “x” value of color of %1	
%3	“0000” – “1000” ----- Directly specify “y” value of color of %1	

Details	Set "x", "y" value of Measured of Color matching. (Available only in the normal Power ON status)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

**8.9.29 CF\_CMMSL Command**

Command	"CF_CMMSL_%1_%2" [CR]	
%1	"RED" -----	Set value of Red
	"GREEN" -----	Set value of Green
	"BLUE" -----	Set value of Blue
%2	"0000" – "1000" -----	Directly specify "L" value of color of %1
Details	Set "L" value of Measured of Color matching. (Available only in the normal Power ON status)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

**8.9.30 CF\_CMTGXY Command**

Command	"CF_CMTGXY_%1_%2_%3" [CR]	
%1	"RED" -----	Set value of Red
	"GREEN" -----	Set value of Green
	"BLUE" -----	Set value of Blue
	"WHITE" -----	Set value of White
	"CYAN" -----	Set value of Cyan
	"MAGENTA" -----	Set value of Magenta
	"YELLOW" -----	Set value of Yellow
%2	"0000" – "1000" -----	Directly specify "x" value of color of %1
%3	"0000" – "1000" -----	Directly specify "y" value of color of %1
Details	Set "x", "y" value of Target of Color matching. (Available only in the normal Power ON status)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

**8.9.31 CF\_CMTGG Command**

Command	"CF_CMTGG_%1_%2" [CR]	
%1	"RED" -----	Set value of Red
	"GREEN" -----	Set value of Green
	"BLUE" -----	Set value of Blue
	"WHITE" -----	Set value of White
	"CYAN" -----	Set value of Cyan
	"MAGENTA" -----	Set value of Magenta
	"YELLOW" -----	Set value of Yellow
%2	"0000" – "1000" -----	Directly specify "g" value of color of %1
Details	Set "g" value of Target of Color matching. (Available only in the normal Power ON status)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

**8.9.32 CF\_CMAUTOTESTPAT Command**

Command	"CF_CMAUTOTESTPAT_%1" [CR]
---------	----------------------------

%1	“ON” ----- Set to On “OFF” ----- Set to Off	
Details	Set Auto test pattern of Color matching. (Available only in the normal Power ON status)	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

#### 8.9.33 CF\_CMIRST Command

Command	“CF_CMIRST_%1” [CR]	
%1	“CMIRST” ----- Reset setting of Color matching “ADCRST” ----- Reset setting of Advanced color matching	
Details	Reset setting of Color matching.(Available only in the normal Power ON status)	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

#### 8.9.34 CF\_CMSTORE Command

Command	“CF_CMSTORE_%1” [CR]	
%1	“CMSTR” ----- Store setting of Color matching “ADCSTR” ----- Store setting of Advanced color matching	
Details	Store setting of Color matching.(Available only in the normal Power ON status)	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

#### 8.9.35 CMMTESTPAT Command

Command	“CF_CMMTESTPAT_%1” [CR]	
%1	“RED” ----- Display Red “GREEN” ----- Display Green “BLUE” ----- Display Blue “OFF” ----- Do not show test pattern display	
Details	Display Test pattern of Measured of Color matching. (Available only in the normal Power ON status)	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

#### 8.9.36 CF\_CMTGTESTPAT Command

Command	“CF_CMTGTESTPAT_%1” [CR]	
%1	“RED” ----- Display Red “GREEN” ----- Display Green “BLUE” ----- Display Blue “WHITE” ----- Display White “CYAN” ----- Display Cyan “MAGENTA” ----- Display Magenta “YELLOW” ----- Display Yellow “OFF” ----- Do not show test pattern display	
Details	Display Test pattern of Target of Color matching. (Available only in the normal Power ON status)	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

**8.9.37 CF\_CMFDEFAULT Command**

Command	“CF_CMFDEFAULT_%1” [CR]	
%1 Details	“RST” -----	Reset the value of Target
	Return the value of Advanced color matching to Factory Default status (Available only in the normal Power ON status)	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

**8.9.38 CF\_CMMENUOFF Command**

Command	“CF_CMMENUOFF_%1” [CR]	
%1	“SET” -----	Temporarily hide Advanced color matching menu
	“RST” -----	Display Advanced color matching menu
Details	Set Menu off function of Advanced color matching. (Available only in the normal Power ON status)	
	Acceptable	“000” [CR]
Response	Unacceptable	“Error Code” [CR]

**8.9.39 CF\_CMMENU Command**

Command	“CF_CMMENU_%1” [CR]	
%1	“ON” -----	Display Advanced color matching menu
	“OFF” -----	Set Advanced color matching menu undisplayed.
Details	Set Advanced color matching menu displayed or undisplayed. (Available only in the normal Power ON status)	
	Acceptable	“000” [CR]
Response	Unacceptable	“Error Code” [CR]

**8.9.40 CF\_HDMI SETUP Command**

Command	“CF_HDMI SETUP_%1” [CR]	
%1	“NORMAL” -----	Select Normal mode
	“ENHANCED” -----	Select Enhanced mode
Details	Select image mode of HDMI setup. The status set by this command is stored in EEPROM and its setting is effective after ALL is OFF This command is available in normal Power ON status.	
	Acceptable	“000” [CR]
Response	Unacceptable	“Error Code” [CR]

**8.9.41 CF\_FILH Command**

Command	“CF_FILH_%1” [CR]	
%1	“RST” -----	Reset Filter used time
Details	Reset used time for filter of projector	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

**8.9.42 CF\_FILTIMER Command**

Command	“CF_FILTIMER_%1” [CR]	
---------	-----------------------	--

%1	"0400" ----- Set 400 hours "0700" ----- Set 700 hours "1000" ----- Set 1000 hours "OFF" ----- Set Off(Do not warning display)
Details	Set time to display Filter cleaning / replacement warning on screen
Response	Acceptable "000" [CR]
	Unacceptable "Error Code" [CR]

#### 8.9.43 CF\_FILCTL Command

Command	"CF_FILCTL_%1" [CR]
%1	"ROLL" ----- Execute operation of scroll of filter
Details	Execute operation of scroll of filter
Response	Acceptable "000" [CR]
	Unacceptable "Error Code" [CR]

#### 8.9.44 CF\_FILSCRL Command

Command	"CF_FILSCRL_%1" [CR]
%1	"RST" ----- Reset Filter scroll counter
Details	Reset Filter scroll counter
Response	Acceptable "000" [CR]
	Unacceptable "Error Code" [CR]

#### 8.9.45 CF\_FANSPEED Command

Command	"CF_FANSPEED_%1" [CR]
%1	"MAX" ----- Select maximum fan speed "NOR" ----- Select normal fan speed
Details	Switch Fan Control Speed mode.(Available only in the normal Power ON status) The status set by this command is stored in EEPROM and setting remains effective even after the power is turned to ALL OFF status.
Response	Acceptable "000" [CR]
	Unacceptable "Error Code" [CR]

#### 8.9.46 CF\_SIMPLEMODE Command

Command	"CF_SIMPLEMODE_%1" [CR]
%1	"ON" ----- Set Simple mode to ON "OFF" ----- Set Simple mode to OFF
Details	Set Simple mode.(Available only in the normal Power ON status) The status set by this command is stored in EEPROM and setting remains effective even after the power is turned to ALL OFF status.
Response	Acceptable "000" [CR]
	Unacceptable "Error Code" [CR]

#### 8.9.47 CF\_RCODE Command

Command	"CF_RCODE_%1" [CR]
%1	"001" ----- Select Code 1 "002" ----- Select Code 2 "003" ----- Select Code 3

	<p>“004” ----- Select Code 4      “005” ----- Select Code 5      “006” ----- Select Code 6      “007” ----- Select Code 7      “008” ----- Select Code 8      “UP” ----- The same operation as pressing Up key or Left key      “DN” ----- The same operation as pressing Down key or Right key</p>				
Details	Select Code of Remote Control (Available only in the normal Power ON status) The status set by this command is stored in EEPROM and setting remains effective even after the power is turned to ALL OFF status.				
Response	<table border="1"> <tr> <td>Acceptable</td><td>“000” [CR]</td></tr> <tr> <td>Unacceptable</td><td>“Error Code” [CR]</td></tr> </table>	Acceptable	“000” [CR]	Unacceptable	“Error Code” [CR]
Acceptable	“000” [CR]				
Unacceptable	“Error Code” [CR]				

#### 8.9.48 CF\_RSENS Command

Command	“CF_RSENS_%1” [CR]				
%1	<p>“BOTH” ----- Select both front and back receiver of projector      “FRONT” ----- Select only front receiver of projector      “BACK” ----- Select only back receiver of projector      “UP” ----- The same operation as pressing Up key or Left key      “DN” ----- The same operation as pressing Down key or Right key</p>				
Details	Select location of infrared remote receiver of remote control (Available only in the normal Power ON status) The status set by this command is stored in EEPROM and setting remains effective even after the power is turned to ALL OFF status.				
Response	<table border="1"> <tr> <td>Acceptable</td><td>“000” [CR]</td></tr> <tr> <td>Unacceptable</td><td>“Error Code” [CR]</td></tr> </table>	Acceptable	“000” [CR]	Unacceptable	“Error Code” [CR]
Acceptable	“000” [CR]				
Unacceptable	“Error Code” [CR]				

#### 8.9.49 CF\_P-MANE Command

Command	“CF_P-MANE_%1” [CR]				
%1	<p>“OFF” ----- Set Power Management to Off      “READY1” ----- Set Power Management to Ready1      “READY2” ----- Set Power Management to Ready2      “SHUTDOWN” ----- Set Power Management to Shut Down mode      “UP” ----- The same operation as pressing Up key or Left key      “DN” ----- The same operation as pressing Down key or Right key</p>				
Details	Set/Cancel Power Management (Available only in the normal Power ON status) The status set by this command is stored in EEPROM and setting remains effective even after the power is turned to ALL OFF status.				
Response	<table border="1"> <tr> <td>Acceptable</td><td>“000” [CR]</td></tr> <tr> <td>Unacceptable</td><td>“Error Code” [CR]</td></tr> </table>	Acceptable	“000” [CR]	Unacceptable	“Error Code” [CR]
Acceptable	“000” [CR]				
Unacceptable	“Error Code” [CR]				

#### 8.9.50 CF\_P-MANETIME Command

Command	“CF_P-MANETIME_%1” [CR]				
%1	<p>“01” - “30” ---- Directly specify setting time by the minute      “UP” ----- Increment value by 1 (Switched in 01→02→---→30→01 order)      “DN” ----- Decrement value by 1 (Switched in 30→29→---→01→30 order)</p>				
Details	Set time of Power Management time (Available only in the normal Power ON status) The status set by this command is stored in EEPROM and setting remains effective even after the power is turned to ALL OFF status.				
Response	<table border="1"> <tr> <td>Acceptable</td><td>“000” [CR]</td></tr> <tr> <td>Unacceptable</td><td>“Error Code” [CR]</td></tr> </table>	Acceptable	“000” [CR]	Unacceptable	“Error Code” [CR]
Acceptable	“000” [CR]				
Unacceptable	“Error Code” [CR]				

**8.9.51 CF\_ON-STA Command**

Command	“CF_ON-STA_%1” [CR]	
%1	“ON” ----- Set Direct on active. “OFF” ----- Set Direct on inactive. “UP” ----- The same operation as pressing Up key or Left key “DN” ----- The same operation as pressing Down key or Right key *“UP” and “DN” are exactly same operation.	
Details	Set/Cancel Direct Power On (Available only in the normal Power ON status) The status set by this command is stored in EEPROM and setting value remains effective even after the power is turned to ALL OFF status.	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

**8.9.52 CF\_POINTER Command**

Command	“CF_POINTER_%1” [CR]	
%1	“ARROW” ----- Select Arrow Pointer “FINGER” ----- Select Finger Pointer “LASER” ----- Select Dot Pointer	
Details	Select indication of Pointer. (Available only in the normal Power ON status) The status set by this command is stored in EEPROM and setting value remains effective even after the power is turned to ALL OFF status.	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

**8.9.53 CF\_PTIMEMODE Command**

Command	“CF_PTIMEMODE_%1” [CR]	
%1	“COUNTUP” ----- Set P-timer to Count up mode “COUNTDN” ----- Set P-timer to Count down mode	
Details	Select count up/down mode of P-timer. (Available only in the normal Power ON status) The status set by this command is stored in EEPROM and setting value remains effective even after the power is turned to ALL OFF status.	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

**8.9.54 CF\_PTIMER Command**

Command	“CF_PTIMER_%1” [CR]	
%1	“START” ----- Start P-timer “STOP” ----- Stop P-timer “RESTART” ----- Resume P-timer “RST” ----- Reset P-timer “EXIT” ----- Exit P-timer function	
Details	Select the status of P-timer. (Available only in the normal Power ON status)	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

**8.9.55 CF\_PTIME Command**

Command	“CF_PTIME_%1” [CR]	
---------	--------------------	--

%1	"001" – "180" ----- Directly specify setting time	
Details	<p>Set the time for Count down mode of P-timer.            (Available only in the normal Power ON status)</p> <p>The status set by this command is stored in EEPROM and setting value remains effective even after the power is turned to ALL OFF status.</p>	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

#### 8.9.56 CF\_KEYDIS Command

Command	"CF_KEYDIS_%1" [CR]	
%1	<p>"NONE" ----- RC and KEY are both enabled.</p> <p>"RC" ----- RC is disabled.</p> <p>"KEY" ----- KEY is disabled.</p>	
Details	<p>Disable RC and/or KEY functions            (Available only in the normal Power ON status)</p>	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

#### 8.9.57 CF\_PJPINCODE Command

Command	"CF_PJPINCODE_%1" [CR]	
%1	<p>"0000 – 9999" ----- Directly specify PJ PIN code</p>	
Details	<p>Enter PIN code to cancel PIN code lock            (Available only in the normal Power ON status)            PIN code can not be changed. (Only PIN code lock is canceled.)</p> <p>*When PIN code Lock is enabled:            PIN code is matched ----- Command is valid (Acceptable)            PIN code is mismatched ----- Command is invalid (Error code "102")            PIN code is beyond %1 available range --- Command is invalid (Error code "?")</p> <p>*When PIN code lock is canceled:            PIN code is within %1 range ----- Command is valid (Acceptable)            PIN code is out of %1 range ----- Command is invalid (Error code is 102)</p> <p>This command is only valid when "PJ PIN code" dialog is displayed to enter PIN code after Power is ON and Countdown is completed.</p> <p>When PIN code lock is set to "On1", it needs to send this command every time the projector is turned on.</p>	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

#### 8.9.58 CF\_SHUTPROT Command

Command	"CF_SHUTPROT_%1" [CR]	
%1	<p>"OFF" ----- RC and Side panel are both enabled.</p> <p>"RC" ----- RC is disabled.</p> <p>"KEY" ----- Side panel is disabled.</p> <p>"BOTH" ----- RC and Side panel are both disabled.</p>	
Details	<p>Set valid / invalid of Side panel or RC key on Shutter control function            (Valid only when in the normal Power ON status)</p>	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

**8.9.59 CF\_SHUTRELEASE Command**

Command	“CF_SHUTRELEASE_%1” [CR]	
%1	“ANY”-----Enable to release Shutter with any key “SHUTTER” ----- Enable to release Shutter with only “SHUTTER” key	
Details	Set Release key of Shutter. (Valid only when in the normal Power ON status) The status set by this command is stored in EEPROM and setting remains effective even after the power is turned to ALL OFF status.	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

**8.9.60 CF\_SHUTH Command**

Command	“CF_SHUTH_%1” [CR]	
%1	“005”-“480”-----Specify setting time directly “UP” ----- Add 1 minute “DN” -----Decrease 1 minute	
Details	Set time of operating shutter management function. (Valid only when in the normal Power ON status) The status set by this command is stored in EEPROM and setting remains effective even after the power is turned to ALL OFF status.	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

**8.9.61 CF\_CCAPTIONDISP Command**

Command	“CF_CCAPTIONDISP_%1”[CR]	
%1	“OFF” ----- Select Off “CC1” ----- Select CC1 “CC2” ----- Select CC2 “CC3” ----- Select CC3 “CC4” ----- Select CC4	
Details	Select channel of Closed caption.(Valid only when in the normal Power ON status) The status set with this command is stored in EEPROM and its setting is effective even after ALL is OFF.  Note)Closed caption is available under conditions below; Entered signal is appropriate (Video, NTSC signal or S-video) and System is fixed to NTSC.	
Response	Acceptable	“000”[CR]
	Unacceptable	“Error Code”[CR]

**8.9.62 CF\_CCAPTIONCOLOR Command**

Command	“CF_CCAPTIONCOLOR_%1”[CR]	
%1	“COLOR” ----- Select Color “WHITE” ----- Select White	
Details	Select color of Closed caption. (Valid only when in the normal Power ON status) The status set with this command is stored in EEPROM and its setting is effective even after ALL is OFF.  Note)Closed caption is available under conditions below; Entered signal is appropriate (Video, NTSC signal or S-video) and System is fixed to NTSC.	
Response	Acceptable	“000”[CR]
	Unacceptable	“Error Code”[CR]

**8.9.63 CF\_DELAYCTRL Command**

Command	“CF_DELAYCTRL_%1” [CR]	
%1	“OFF”----- Set Video delay control to OFF “LOW”----- Set Video delay control to LOW “MID”----- Set Video delay control to MID “HIGH”----- Set Video delay control to HIGH	
Details	Select the mode of Video delay control (Valid only when in the normal Power ON status) The status set by this command is stored in EEPROM and setting remains effective even after the power is turned to ALL OFF status.	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

**8.9.64 CF\_TESTPAT Command**

Command	“CF_TESTPAT_%1” [CR]	
%1	“COLOR” ----- Display Color bar “GRAD1” ----- Display 16step(white→black) “GRAD2” ----- Display 16step(white←black) “GRAD3” ----- Display 16step(white↓black) “GRAD4” ----- Display 16step(white↑black) “WHITE” ----- Display all white “BLACK” ----- Display all black “CROSS” ----- Display Cross “OFF” -----Do not show test pattern display	
Details	Execute test pattern display. (Available only in the normal Power ON status)	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

**8.9.65 CF\_FDEFAULT Command**

Command	“CF_FDEFAULT_%1” [CR]	
%1	“RST”	
Details	Reset to Factory Default setting (Available only in the normal Power ON status)	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

## 8.10 Other Commands

### 8.10.1 CF\_KEYEMU Command

Command	"CF_KEYEMU_%1" [CR]	
%1	"RIGHT" ----- Move Pointer rightward in On-Screen Display Menu "LEFT" ----- Move Pointer leftward in On-Screen Display Menu "UP" ----- Move Pointer to upward On-Screen Display Menu "DN" ----- Move Pointer to downward in On-Screen Display Menu "SELECT" ----- The same operation as "SELECT" button of RC "AUTOPC" ----- Execute Auto PC Adj. operation "LENSSHIFT" ----- Return the Lens to center position	
Details	<p>This command is behaving the same as corresponding keys of Projector. Once Auto PC adj. is started with "AUTOPC" command, it does not stop with receiving the command another time.</p> <p>*When transmit command of CF_KEYEMU parameter</p> <ul style="list-style-type: none"> <li>- When User menu is displayed: function is carried out with having displayed User menu.</li> <li>- When User menu isn't displayed: error code "000" is returned, function is non-practice.</li> </ul> <p>* "101" is not returned even if a command of CF_KEYEMU is transmitted when cursor moves to the item which cannot toggle at an edge of the main menu.</p> <p>EX): Display main menu, and move to second menu of Image adj. Move a cursor to "Quit" position, and transmit a command of KEYEMU_DN. Then a cursor doesn't toggle and "000" is returned.</p> <p>*When transmit command of CF_KEYEMU AUTOPC</p> <ul style="list-style-type: none"> <li>- When practice of Auto pc adj is possible: Function is practice, "000" is returned.</li> <li>- When practice of Auto pc adj is impossible: display exclamation mark, "000" is returned.</li> </ul>	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

### 8.10.2 CF\_MENU Command

Command	"CF_MENU_%1" [CR]	
%1	"ON" ----- Display On-Screen Display Menu "OFF" ----- Hide On-Screen Display Menu	
Details	Set On-Screen Display mode. (Available only in the normal Power ON status)	
Response	Acceptable	"000" [CR]
	Unacceptable	"Error Code" [CR]

### 8.10.3 CF\_POWER Command

Command	“CF_POWER_%1” [CR]	
%1	<p>“ON” ----- Power ON          “OFF” ----- Power OFF</p> <p>* Issuing another command during countdown process forced countdown operation to be terminated.</p> <p>* Error Code is returned in some projector statuses, which indicates the command is impossible to be executed. (See [8.3] for details)</p> <p>* Returning the response “000” [CR] (acceptable) does not always mean that the status has already changed to Power ON.          Ex) When the temperature approaches abnormal status after returning “000” [CR] to the command CF_POWER ON.          Therefore, to get the projector status requires using Status Read command.</p>	
Details	Set Power to ON/OFF	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

### 8.10.4 CF\_FREEZE Command

Command	“CF_FREEZE_%1” [CR]	
%1	<p>“ON” ----- Set Freeze to ON.          “OFF” ----- Set Freeze to OFF.          “UP” ----- Switch between ON and OFF.          “DN” ----- Switch between ON and OFF.          * The same operation for “UP” and “DN” as this model has only “ON” / “OFF”.</p>	
Details	Set / Cancel Freeze function. (Available only in the normal Power ON status) Receiving FREEZE_ON command when the projector is Freeze enabled, Freeze status is kept.	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

### 8.10.5 CF\_VMUTE Command

Command	“CF_VMUTE_%1” [CR]	
%1	<p>“ON”----- Set Video Mute (Shutter Close)          “OFF” ----- Cancel Video Mute (Shutter Open)</p>	
Details	Set / Cancel Video Mute. (Available only in the normal Power ON status)	
Response	Acceptable	“000” [CR]
	Unacceptable	“Error Code” [CR]

## 9 Status Read Command

### 9.1 Format

- 1) PC issues commands in format as below:

“CR\_**COMMAND**” [CR]

Command: String

- 2) When projector receives the appropriate command, it returns the required data as a string.

“**000\_** %1 [CR]

%1: Required Data (String)

- 3) When the received data cannot be decoded, the projector returns “?” [CR]

### 9.2 Transfer Example

Get total dots of projector by Expand Serial Commands

PC → PJ: “CR\_TDOTS” [CR]

PC ← PJ: “000\_1344” [CR]

### 9.3 Operation Condition

1. Basically it should be always operated.

## 9.4 Image Status Read Command

### 9.4.1 CR\_BRIGHT Command

Command	“CR_BRIGHT” [CR]	
Details	Get user controlled value of Brightness	
Response	Acceptable	“000_%1” [CR]
	%1	“000 – 063”
	Unacceptable	“Error Code” [CR]

### 9.4.2 CR\_CONT Command

Command	“CR_CONT” [CR]	
Details	Get user controlled value of Contrast	
Response	Acceptable	“000_%1” [CR]
	%1	“000 – 063”
	Unacceptable	“Error Code” [CR]

### 9.4.3 CR\_COLOR Command

Command	“CR_COLOR” [CR]	
Details	Get user controlled value of Color	
Response	Acceptable	“000_%1” [CR]
	%1	“000 – 063”
	Unacceptable	“Error Code” [CR]

### 9.4.4 CR\_TINT Command

Command	“CR_TINT” [CR]	
Details	Get user controlled value of Tint	
Response	Acceptable	“000_%1” [CR]
	%1	“000 – 063”
	Unacceptable	“Error Code” [CR] --- When command is not available in the given condition (such as being selected input). “?” [CR] --- When unknown command is received

### 9.4.5 CR\_APCTRL Command

Command	“CR_APCTRL” [CR]	
Details	Get setting status of Auto Picture Control	
Response	Acceptable	“000_%1” [CR]
	%1	“L1” ----- Operate Auto Picture Control with Level1 “L2” ----- Operate Auto Picture Control with Level2 “OFF” ----- Set Auto Picture Control OFF
	Unacceptable	“?” [CR]

**9.4.6 CR\_SHARP Command**

Command	“CR_SHARP” [CR]	
Details	Get user controlled value of Sharpness	
Response	Acceptable	“000_%1” [CR]
	%1	“000 – 031”
	Unacceptable	“Error Code” [CR]

**9.4.7 CR\_GAMMA Command**

Command	“CR_GAMMA” [CR]	
Details	Get user controlled value of Gamma	
Response	Acceptable	“000_%1” [CR]
	%1	“000 – 015”
	Unacceptable	“Error Code” [CR]

**9.4.8 CR\_WBAL-R Command**

Command	“CR_WBAL-R” [CR]	
Details	Get user controlled Red value of White Balance	
Response	Acceptable	“000_%1” [CR]
	%1	“000 – 063”
	Unacceptable	“Error Code” [CR]

**9.4.9 CR\_WBAL-G Command**

Command	“CR_WBAL-G” [CR]	
Details	Get user controlled Green value of White Balance	
Response	Acceptable	“000_%1” [CR]
	%1	“000 – 063”
	Unacceptable	“Error Code” [CR]

**9.4.10 CR\_WBAL-B Command**

Command	“CR_WBAL-B” [CR]	
Details	Get user controlled Blue value of White Balance	
Response	Acceptable	“000_%1” [CR]
	%1	“000 – 063”
	Unacceptable	“Error Code” [CR]

**9.4.11 CR\_COLTEMP Command**

Command	“CR_COLTEMP” [CR]	
Details	Get Color Temperature setting status	
Response	Acceptable	“000_%1” [CR]
	%1	“000” ----- Xlow
		“001” ----- Low
		“002” ----- Mid
		“003” ----- High
	“BLANK” --- OSD Menu is blank (Neither of Xlow / Low / Mid / High)	
	Unacceptable	“Error Code” [CR]

**9.4.12 CR\_OFFSET-R Command**

Command	“CR_OFFSET-R” [CR]	
Details	Get user controlled Red value of Offset	
Response	Acceptable	“000_%1” [CR]
	%1	“000 – 063”
	Unacceptable	“Error Code” [CR]

**9.4.13 CR\_OFFSET-G Command**

Command	“CR_OFFSET-G” [CR]	
Details	Get user controlled Green value of Offset	
Response	Acceptable	“000_%1” [CR]
	%1	“000 – 063”
	Unacceptable	“Error Code” [CR]

**9.4.14 CR\_OFFSET-B Command**

Command	“CR_OFFSET-B” [CR]	
Details	Get user controlled Blue value of Offset	
Response	Acceptable	“000_%1” [CR]
	%1	“000 – 063”
	Unacceptable	“Error Code” [CR]

**9.4.15 CR\_NZRED Command**

Command	“CR_NZRED” [CR]	
Details	Get Noise Reduction setting status	
Response	Acceptable	“000_%1” [CR]
	%1	“OFF” ----- Cancel Noise Reduction “ON” ----- Set Noise Reduction
	Unacceptable	“Error Code” [CR]

#### 9.4.16 CR\_PROGV Command

Command	“CR_PROGV” [CR]	
Details	Get Progressive scan setting status	
Response	Acceptable	“000_%1” [CR]
	%1	“ON” ----- Set Progressive scan On “FILM” ----- Select FILM mode “OFF” ----- Set Progressive scan Off
	Unacceptable	“Error Code” [CR]

#### 9.4.17 CR\_IMAGE Command

Command	“CR_IMAGE” [CR]	
Details	Get image setting status	
Response	Acceptable	“000_%1” [CR]
	%1	“DYNAMIC” ----- Dynamic “STAND” ----- Standard “REAL” ----- Real “NATURAL” ----- Natural “CINEMA” ----- Cinema “CUSTOM1” ----- “Image1” “CUSTOM2” ----- “Image2” “CUSTOM3” ----- “Image3” “CUSTOM4” ----- “Image4” “CUSTOM5” ----- “Image5” “CUSTOM6” ----- “Image6” “CUSTOM7” ----- “Image7” “CUSTOM8” ----- “Image8” “CUSTOM9” ----- “Image9” “CUSTOM10” ----- “Image10”
	Unacceptable	“Error Code” [CR] ----- When the command is invalid due to condition such as Input source. “?” [CR] ----- When unknown command is received

#### 9.4.18 CR\_IMGGMD Command

Command	“CR_IMGGMD” [CR]	
Details	Get setting status of Standard/Real/Cinema in Image Gamma	
Response	Acceptable	“000_%1” [CR]
	%1	“DYN” ----- Dynamic “STD” ----- Standard “REL” ----- Real “NTR” ----- Natural “CNM” ----- Cinema
	Unacceptable	“Error Code” [CR]

#### 9.4.19 CR\_ADVCOL Command

Command	“CR_ADVCOL” [CR]	
Details	Get setting status of Advanced color	
Response	Acceptable	“000_%1” [CR]
	%1	“AUTO” ----- Operate Advanced color with Auto “OFF” ----- Set Advanced color OFF
	Unacceptable	“?” [CR]

## 9.5 PC Adjust Status Read Command

### 9.5.1 CR\_FSYNC Command

Command	“CR_FSYNC” [CR]	
Details	Get value of Fine Sync	
Response	Acceptable	“000_%1” [CR]
	%1	“0000 – 0031”
	Unacceptable	“Error Code” [CR] --- When command is not available in the given condition (such as being selected input) “?” [CR] --- When unknown command is received

### 9.5.2 CR\_TDOTS Command

Command	“CR_TDOTS” [CR]	
Details	Get value of Total Dots	
Response	Acceptable	“000_%1” [CR]
	%1	“mmmm” – “nnnn” (mmmm = Display area H + Position H) (nnnn = Maximum value less than 140 MHz of Dot Clock)
	Unacceptable	“Error Code” [CR] ----- When command is not available in the given condition (such as being selected input) “?” [CR] ----- When unknown command is received

### 9.5.3 CR\_CLPPHASE Command

Command	“CR_CLPPHASE” [CR]	
Details	Get value of Clamp Phase value	
Response	Acceptable	“000_%1” [CR]
	%1	“0000 – 0255”
	Unacceptable	“Error Code” [CR]

### 9.5.4 CR\_H-POS Command

Command	“CR_H-POS” [CR]	
Details	Get value of Horizontal Position	
Response	Acceptable	“000_%1” [CR]
	%1	“0000 – nnnn” (nnnn = Total Dots – Display area H)
	Unacceptable	“Error Code” [CR] ----- When command is not available in the given condition (such as being selected input) “?” [CR] ----- When unknown command is received

### 9.5.5 CR\_V-POS Command

Command	“CR_V-POS” [CR]	
Details	Get value of Vertical Position	
Response	Acceptable	“000_%1” [CR]
	%1	“0000 – nnnn” (nnnn = Total Line – Display area V)
	Unacceptable	“Error Code” [CR] ----- When command is not available in the given condition (such as being selected input) “?” [CR] ----- When unknown command is received

### 9.5.6 CR\_DDOTS Command

Command	“CR_DDOTS” [CR]	
Details	Get value of Display Dots	
Response	Acceptable	“000_%1” [CR]
	%1	“0100 – nnnn” (nnnn = Total Dots – Position H)
	Unacceptable	“Error Code” [CR] ---- When command is not available in the given condition (such as being selected input) “?” [CR] ----- When unknown command is received

### 9.5.7 CR\_DLINES Command

Command	“CR_DLINES” [CR]	
Details	Get value of Display Line	
Response	Acceptable	“000_%1” [CR]
	%1	“0100 – nnnn” (nnnn = Total Line – Position V)
	Unacceptable	“Error Code” [CR] ---- When command is not available in the given condition (such as being selected input) “?” [CR] ----- When unknown command is received

### 9.5.8 CR\_ORGMODE Command

Command	"CR_ORGMODE" [CR]	
Details	Get the original signal of current selected Mode that is set in PC Adj. When MODE1- 10 or EXT11-50 is not selected, get the current signal.	
Response	Acceptable %1	<p>When input signal is PC Analog;      "VGA1" ----- Indicates signal is VGA1      "VGA2" ----- Indicates signal is VGA2      :      "XGA1" ----- Indicates signal is XGA1      :      "WXGA3" ----- Indicates signal is WXGA3      "1080i60" ----- Indicates signal is 1080i60      "1080i50" ----- Indicates signal is 1080i50      "1035i" ----- Indicates signal is 1035i      "720P60" ----- Indicates signal is 720p60      "720P50" ----- Indicates signal is 720p50      "575P" ----- Indicates signal is 575p      "480P" ----- Indicates signal is 480p      "575i" ----- Indicates signal is 575i      "480i" ----- Indicates signal is 480i      "1080PSF/24" ----- Indicates signal is 1080psf/24      "1080PSF/25" ----- Indicates signal is 1080psf/25      "1080PSF/30" ----- Indicates signal is 1080psf/30      "1080P24" ----- Indicates signal is 1080p24      "1080P25" ----- Indicates signal is 1080p25      "1080P30" ----- Indicates signal is 1080p30      "1080P50" ----- Indicates signal is 1080p50      "1080P60" ----- Indicates signal is 1080p60</p> <p>Note; To differentiate between 60Hz and 50Hz in 1080i and 720p,      "60" or "50" is necessary to add to the parameter in this command      * When input signal is not PC Analog, error code "101" is returned.</p>
	Unacceptable	"Error Code" [CR]

### 9.5.9 CR\_PCSTORE Command

Command	"CR_PCSTORE" [CR]	
Details	Get Free or Stored status of MODE1 - 10 in PC Adjust. Data consists of 10 bytes and each byte represents MODE1-10. (F:Free, S:Stored)	
Response	Acceptable %1	<p>"000_%1" [CR]</p> <p>"FFFFFFFFFFF" ----- ALL Free      "SFFFFFFFFF" ----- Mode1 is Stored, others are Free      :      "FFFFFFFFFS" ----- Mode10 is Stored, others are Free      "SSSSSSSSSS" ----- ALL Stored</p>
	Unacceptable	"Error Code" [CR]

### 9.5.10 CR\_SETPCADJ Command

Command	“CR_SETPCADJ” [CR]		
Details	Get PC signal for current system		
Response	Acceptable	“000_%1” [CR]  When input signal is PC Analog: “VGA1” ----- Indicates VGA1 is selected “VGA2” ----- Indicates VGA2 is selected : “XGA1” ----- Indicates XGA1 is selected : “WXGA3” ----- Indicates WXGA3 is selected “1080P” ----- Indicates 1080p is selected “1080I” ----- Indicates 1080i is selected “1035I” ----- Indicates 10350i is selected “720P” ----- Indicates 720p is selected “575P” ----- Indicates 575p is selected “480P” ----- Indicates 480p is selected “575I” ----- Indicates 575i is selected “480I” ----- Indicates 480i is selected “1080PSF/24” ----- Indicates 1080psf/24 is selected “1080PSF/25” ----- Indicates 1080psf/25 is selected “1080PSF/30” ----- Indicates 1080psf/30 is selected : “MODE10” ----- Indicates Mode10 is selected “EXT11” ----- EXT11 is selected : “EXT60” ----- EXT60 is selected  * Error Code “101” [CR] is returned for no signal. * When input signal is not PC Analog, error code “101” is returned.	
	Unacceptable	“Error Code” [CR]	

## 9.6 Video Status Read Command

### 9.6.1 CR\_SERSYS Command

Command	"CR_SERSYS" [CR]	
Details	Get selected current signal. Auto detected signal is returned in Auto mode Only available when Input is Y,Pb/Cb,Pr/Cr, S-Video or Video. (This is not the case for PC-Analog and HDMI signals)	
Response	Acceptable	"000_%1" [CR]
	%1	"1080PSF/24" ----- 1080psf 24Hz "1080P60" ----- 1080p 60Hz "1080P50" ----- 1080p 50Hz "1080P30" ----- 1080p 30Hz "1080P25" ----- 1080p 25Hz "1080P24" ----- 1080p 24Hz "1080I60" ----- 1080i 60Hz , 1080psf 30Hz "1080I50" ----- 1080i 50Hz , 1080psf 25Hz "1035I". ----- 1035i "720P60" ----- 720p 60Hz "720P50" ----- 720p 50Hz "575P" ----- 575p "480P" ----- 480p "575I" ----- 575i (includes Composite signal such as PAL) "480I" ----- 480i (includes Composite signal such as NTSC) "NO_SIGNAL" ----- No signal  *When 1080psf30 or 1080psf25 is inputted in System Auto, parameter same as 1080I60/1080I50 is returned.
	Unacceptable	"101" [CR] --- When input signal is PC-Analog, PC-Digital, AV HDCP, or HDMI

## 9.7 Input Read Command

### 9.7.1 CR\_INPUT Command

Command	“CR_INPUT” [CR]	
Details	Get selected INPUT No.	
Response	Acceptable	“000_%1” [CR]
	%1	“1 – 4”
	Unacceptable	“Error Code” [CR]

### 9.7.2 CR\_SOURCE Command

Command	“CR_SOURCE” [CR]	
Details	Get selected source	
Response	Acceptable	“000_%1” [CR]
	%1	“DIGITAL” ----- RGB (PC Digital) is selected “ANALOG” ----- RGB (PC Analog) is selected “SCART” ----- RGB (Scart) is selected “HDCP” ----- RGB (AV HDCP) is selected “HDMI” ----- HDMI is selected “VIDEO” ----- Video is selected “S-VIDEO” ----- S-Video is selected “YPBPR” ----- Y,Pb/Cb,Pr/Cr is selected “NETWORK” ----- Network is selected
	Unacceptable	“Error Code” [CR] --- When command is not available in the given condition (such as being selected input) “?” [CR] ----- When unknown command is received

### 9.7.3 CR\_SRCINP1 Command

Command	“CR_SRCINP1” [CR]	
Details	Get Source of INPUT1	
Response	Acceptable	“000_%1” [CR]
	%1	“DIGITAL” ----- in PC Digital mode “ANALOG” ----- in PC Analog mode “SCART” ----- in Scart mode “HDCP” ----- in AV HDCP mode “HDMI” ----- in HDMI mode
	Unacceptable	“Error Code” [CR]

### 9.7.4 CR\_SRCINP2 Command

Command	“CR_SRCINP2” [CR]	
Details	Get Source of INPUT2	
Response	Acceptable	“000_%1” [CR]
	%1	“VIDEO” ----- in Video mode “YPBPR” ----- in Y,Pb/Cb,Pr/Cr mode “ANALOG” ----- in RGB mode
	Unacceptable	“Error Code” [CR]

### 9.7.5 CR\_SRCINP3 Command

Command	“CR_SRCINP3” [CR]	
Details	Get Source of INPUT3	
Response	Acceptable	“000_%1” [CR]
	%1	“VIDEO” ----- in Video mode “S-VIDEO” ----- in S-video mode “YPBPR” ----- in Y,Pb/Cb,Pr/Cr mode
	Unacceptable	“Error Code” [CR]

### 9.7.6 CR\_SRCINP4 Command

Command	“CR_SRCINP4” [CR]	
Details	Get Source of INPUT4	
Response	Acceptable	“000_%1” [CR]
	%1	“NETWORK” ----- With PJ-Net attached and the power ON
	Unacceptable	“101” [CR] ----- With PJ-Net attached and the power ON “103” [CR] ----- With PJ-Net unattached “?” [CR] ----- When unknown command is received.

### 9.7.7 CR\_SYSTEM Command

Command	"CR_SYSTEM" [CR]	
Details	Get selected System	
	Acceptable	"000_%1" [CR]
		<p>"VGA1" ----- indicates VGA1 is selected      "VGA2" ----- indicates VGA2 is selected      :      "XGA1" ----- indicates XGA1 is selected      :      "WXGA3" ----- indicates WXGA3 is selected      "1080P" ----- indicates 1080p is selected      "1080I" ----- indicates 1080i is selected      "1035I" ----- indicates 1035i is selected      "720P" ----- indicates 720p is selected      "575P" ----- indicates 575p is selected      "480P" ----- indicates 480p is selected      "575I" ----- indicates 575i is selected      "480I" ----- indicates 480i is selected      "1080PSF/24" ----- indicates 1080psf/24 is selected      "1080PSF/25" ----- indicates 1080psf/25 is selected      "1080PSF/30" ----- indicates 1080psf/30 is selected      "MODE1" ----- indicates Mode1 is selected      :      "MODE10" ----- indicates Mode10 is selected      "EXT11" ----- indicates EXT11 is selected      :      "EXT60" ----- indicates EXT60 is selected      * Error Code "101" [CR] is returned for no signal   </p>
Response	%1	<p>"D-XGA1" ----- indicates D-XGA1 is selected      :      "D-WXGA3" ----- indicates D-WXGA3 is selected      "D-1080P" ----- indicates D-1080p is selected      "D-1080I" ----- indicates D-1080i is selected      "D-1035I" ----- indicates D-1035i is selected      "D-720P" ----- indicates D-720p is selected      "D-575P" ----- indicates D-575p is selected      "D-480P" ----- indicates D-480p is selected      "D-1080PSF/24" ----- indicates D-1080psf/24 is selected      "D-1080PSF/25" ----- indicates D-1080psf/25 is selected      "D-1080PSF/30" ----- indicates D-1080psf/30 is selected      * Error Code "101" [CR] is returned for no signal   </p>
	Input is Y,Pb/Cb,Pr/Cr	<p>"AUTO" ----- indicates Auto is selected      "1080P" ----- indicates 1080p is selected      "1080I" ----- indicates 1080i is selected      "1035I" ----- indicates 1035i is selected      "720P" ----- indicates 720p is selected      "575P" ----- indicates 575p is selected      "480P" ----- indicates 480p is selected      "575I" ----- indicates 575i is selected      "480I" ----- indicates 480i is selected      * Selected System is returned, whether or not signal is coming.   </p>
	Input is Video or S-video	<p>"AUTO" ----- indicates Auto is selected      "NTSC" ----- indicates NTSC is selected      "NTSC443" ----- indicates NTSC4.43 is selected      "PAL" ----- indicates PAL is selected      "SECAM" ----- indicates SECAM is selected      "PAL-M" ----- indicates PAL-M is selected      "PAL-N" ----- indicates PAL-N is selected      * Selected System is returned, whether or not signal is coming.   </p>
	Unacceptable	"Error Code" [CR]

### 9.7.8 CR\_SYSLIST Command

Command	“CR_SYSLIST” [CR]	
Details	Get possible systems for System list	
	Acceptable	“000_%1_%2---%x” [CR]
		<p>Error Code “101” is returned for no signal.  Otherwise following values are returned according to Source.  When input is PC-Analog:  “XGA1” ----- XGA1 is in the list  “1080i” ----- 1080i is in the list  “1080PSF/24” ----- 1080psf/24 is in the list  “1080PSF/25” ----- 1080psf/25 is in the list  “1080PSF/30” ----- 1080psf/30 is in the list  * Auto, Mode1-10 shall not be returned.</p> <p>When input is PC-digital, AV-HDCP or HDMI;  “D-XGA” ----- D-XGA is in the list  “D-720P” ----- D720p is in the list  “D-1080PSF/24” ----- D1080psf/24 is in the list  “D-1080PSF/25” ----- D1080psf/25 is in the list  “D-1080PSF/30” ----- D1080psf/30 is in the list</p> <p>When input is Y,Pb/Cb,Pr/Cr;  All possible systems in Menu, including Auto, are returned;  “AUTO” ----- Auto is in the list  “1080i” ----- 1080i is in the list  “1035i” ----- 1035i is in the list  :  “575i” ----- 575i is in the list  “480i” ----- 480i is in the list</p> <p>When input is Video or S-video;  All possible systems in Menu, including Auto, are returned;  “AUTO” ----- Auto is in the list  “PAL” ----- PAL is in the list  “SECAM” ----- SECAM is in the list  :  “PAL-N” ----- PAL-N is in the list</p>
Response	%1	Unacceptable
		“Error Code” [CR]

### 9.7.9 CR\_MODELIST Command

Command	“CR_MODELIST” [CR]	
Details	Get possible modes for Mode list	
	Acceptable	“000_%1_%2---%x” [CR]
		<p>Error Code “101” is returned except for PC-Analog and for no signal with PC-Analog  Possible modes in Mode1-10 are returned when PC-Analog signal is coming.</p> <p>“MODE1”  “MODE2”  “MODE3”  :  “MODE8”  “MODE9”  “MODE10”</p>
Response	%1	Unacceptable
		“Error Code” [CR]

**9.7.10 CR\_HMSLOT Command**

Command	“CR_HMSLOT” [CR]	
Details	Get the total number of Input.	
Response	Acceptable	“000_%1” [CR]
	%1	“004” ----- When PJ-Net is attached. “003” ----- When PJ-Net is not attached.
	Unacceptable	“Error Code” [CR]

**9.7.11 CR\_NMSLOT1 Command**

Command	“CR_NMSLOT1” [CR]	
Details	Get terminal information of Input1	
Response	Acceptable	“000_%1” [CR]
	%1	“RGB-HDMI”
	Unacceptable	“Error Code” [CR]

**9.7.12 CR\_NMSLOT2 Command**

Command	“CR_NMSLOT2” [CR]	
Details	Get terminal information of Input2	
Response	Acceptable	“000_%1” [CR]
	%1	“5BNC”
	Unacceptable	“Error Code” [CR]

**9.7.13 CR\_NMSLOT3 Command**

Command	“CR_NMSLOT3” [CR]	
Details	Get terminal information of Input3	
Response	Acceptable	“000_%1” [CR]
	%1	“VIDEO”
	Unacceptable	“Error Code” [CR]

**9.7.14 CR\_NMSLOT4 Command**

Command	“CR_NMSLOT4” [CR]	
Details	Get terminal information of Input4	
Response	Acceptable	“000_%1” [CR]
	%1	“NETWORK” ----- When PJ-Net is attached. *With PJ-Net unattached, this command is invalid and error code “103” is returned. *With PJ-Net attached and the power OFF, error code “101” is returned. *In models not supporting PJ-Net, error code “103” is returned.
	Unacceptable	“Error Code” [CR]

**9.7.15 CR\_IDSLOT1 Command**

Command	“CR_IDSLOT1” [CR]	
Details	Get ID information of Input1. This command is to determine sources possible to input.	
Response	Acceptable	“000_%1” [CR]
	%1	“32” ----- On-board (HDMI and D-Sub) Available source: DIGITAL, ANALOG, SCART, HDCP, HDMI
	Unacceptable	“Error Code” [CR]

**9.7.16 CR\_IDSLOT2 Command**

Command	“CR_IDSLOT2” [CR]	
Details	Get ID information of Input2. This command is to determine sources possible to input.	
Response	Acceptable	“000_%1” [CR]
	%1	“41” ----- On-board (5BNC) Available source: ANALOG, VIDEO, YPBPR
	Unacceptable	“Error Code” [CR]

**9.7.17 CR\_IDSLOT3 Command**

Command	“CR_IDSLOT3” [CR]	
Details	Get ID information of Input3. This command is to determine sources possible to input.	
Response	Acceptable	“000_%1” [CR]
	%1	“51” ----- On-board (3BNC and S-VIDEO) Available source: VIDEO, S-VIDEO, YPBPR
	Unacceptable	“Error Code” [CR]

**9.7.18 CR\_IDSLOT4 Command**

Command	“CR_IDSLOT4” [CR]	
Details	Get ID information of Input4. This command is to determine sources possible to input.	
Response	Acceptable	“000_%1” [CR]
	%1	“13” ----- PJ-Net (Viewer capable) Available source: Network *With PJ-Net unattached, this command is invalid and error code “103” is returned. *With PJ-Net attached and the power OFF, error code “101” is returned. *In models not supporting PJ-Net, error code “103” is returned.
	Unacceptable	“Error Code” [CR]

## 9.8 Screen Status Read Command

### 9.8.1 CR\_SCREEN Command

Command	“CR_SCREEN” [CR]	
Details	Get selected screen image size	
Response	Acceptable	“000_%1” [CR]
	%1	“NORMAL” ----- Normal mode “FULL” ----- Full screen mode “WIDE” ----- Wide(16:9) mode “TRUE” ----- True mode “ZOOM” ----- Zoom mode “NATURAL” ----- Natural mode “CUSTOM” ----- Custom mode
	Unacceptable	“Error Code” [CR] --- When command is not available in the given condition (such as being selected input). “?” [CR] --- When unknown command is received

### 9.8.2 CR\_VSCALE Command

Command	“CR_VSCALE” [CR]	
Details	Get setting status of V scale	
Response	Acceptable	“000_%1” [CR]
	%1	“-32”—“035”
	Unacceptable	“Error Code” [CR]

### 9.8.3 CR\_VPOS Command

Command	“CR_VPOS” [CR]	
Details	Get setting status of V Position	
Response	Acceptable	“000_%1” [CR]
	%1	“-15”—“015”
	Unacceptable	“Error Code” [CR]

### 9.8.4 CR\_HSCALE Command

Command	“CR_HSCALE” [CR]	
Details	Get setting status of H scale	
Response	Acceptable	“000_%1” [CR]
	%1	“-32”—“035”
	Unacceptable	“Error Code” [CR]

### 9.8.5 CR\_HPOS Command

Command	“CR_HPOS” [CR]	
Details	Get setting status of H Position	
Response	Acceptable	“000_%1” [CR]
	%1	“-15”—“015”
	Unacceptable	“Error Code” [CR]

**9.8.6 CR\_KYSTNMODE Command**

Command	"CR_KYSTNMODE" [CR]	
Details	Get setting status of Keystone Store Mode	
Response	Acceptable	"000_%1" [CR]
	%1	"STR" ----- Store mode is "Store" "RST" ----- Store mode is "Reset"
	Unacceptable	"?" [CR] ----- When unknown command is received

**9.8.7 CR\_CORNERTESTPAT Command**

Command	"CR_CORNERTESTPAT" [CR]	
Details	Get setting status of test pattern for Corner correction	
Response	Acceptable	"000_%1" [CR]
	%1	"RED" ----- Test pattern is red "WHITE" ----- Test pattern is white "BLUE" ----- Test pattern is blue "OFF" ----- Test pattern is not displayed
	Unacceptable	"Error Code" [CR]

**9.8.8 CR\_CEIL Command**

Command	"CR_CEIL" [CR]	
Details	Get setting status of Ceiling	
Response	Acceptable	"000_%1" [CR]
	%1	"ON" ----- Ceiling projection is enabled "OFF" ----- Ceiling projection is disabled
	Unacceptable	"Error Code" [CR]

**9.8.9 CR\_REAR Command**

Command	"CR_REAR" [CR]	
Details	Get setting status of Rear function	
Response	Acceptable	"000_%1" [CR]
	%1	"ON" ----- Rear projection is enabled "OFF" ----- Rear projection is disabled
	Unacceptable	"Error Code" [CR]

**9.8.10 CR\_SCREENASPECT Command**

Command	"CR_SCREENASPECT" [CR]	
Details	Get status of Screen aspect	
Response	Acceptable	"000_%1" [CR]
	%1	"43MODE" ..... Select 4:3 mode "169MODE" ..... Select 16:9 mode "1610MODE" ..... Select 16:10 mode
	Unacceptable	"Error code" [CR]

## 9.9 Lamp Status Read Command

### 9.9.1 CR\_LAMPREPL Command

Command	"CR_LAMPREPL" [CR]	
Details	Get information of Lamp Replacement time	
Response	Acceptable	"000_%1" [CR]
	%1	"1Y" ----- indicates over lamp replacement time "1N" ----- indicates under lamp replacement time
	Unacceptable	"?" [CR]

### 9.9.2 CR\_LAMPH Command

Command	"CR_LAMPH" [CR]	
Details	Get Lamp running time (in hours) * return actual lamp running time	
Response	Acceptable	"000_%1" [CR]
	%1	"00000 - 99999"
	Unacceptable	"Error Code" [CR]

### 9.9.3 CR\_LAMPCORRESPH Command

Command	"CR_LAMPCORRESPH" [CR]	
Details	Get Lamp running time (in hours) *return lamp running time multiplied by a coefficient (not actual running time)	
Response	Acceptable	"000_%1" [CR]
	%1	"00000 – 99999"
	Unacceptable	"Error Code" [CR]

### 9.9.4 CR\_LAMPMODE Command

Command	"CR_LAMPMODE" [CR]	
Details	Get setting status of Lamp mode	
Response	Acceptable	"000_%1" [CR]
	%1	"NORMAL" ----- Lamp mode is Normal status "ECO1" ----- Lamp mode is Eco1 status "ECO2" ----- Lamp mode is Eco2 status "AUTO" ----- Lamp mode is Auto status
	Unacceptable	"?" [CR]

### 9.9.5 CR\_LAMPSTS Command

Command	"CR_LAMPSTS" [CR]	
Details	Get Lamp status	
Response	Acceptable	"000_%1" [CR]
	%1	"1I" ----- Lamp is ON "1O" ----- Lamp is OFF "1X" ----- Lamp Failure
	Unacceptable	"Error Code" [CR]

**9.9.6 CR\_PROJH Command**

Command	"CR_PROJH" [CR]	
Details	Get total running time of Projector (in hours)	
Response	Acceptable	"000_%1" [CR]
	%1	"0000000 – 0099999"
	Unacceptable	"Error Code" [CR]

**9.9.7 CR\_HMLAMP Command**

Command	"CR_HMLAMP" [CR]	
Details	Get total lamp number	
Response	Acceptable	"000_%1" [CR]
	%1	"001"
	Unacceptable	"Error Code" [CR]

## 9.10 Setting Status Read Command

### 9.10.1 CR\_LANG Command

Command	"CR_LANG" [CR]	
Details	Get selected language	
Response	Acceptable	"000_%1" [CR]
	%1	"ENG" ----- English is selected "DEU" ----- German is selected "FRA" ----- French is selected "ITA" ----- Italian is selected "ESP" ----- Spanish is selected "POR" ----- Portuguese is selected "NED" ----- Dutch is selected "SVE" ----- Swedish is selected "JPN" ----- Japanese is selected "CHI" ----- Chinese is selected "KOR" ----- Korean is selected "RUS" ----- Russian is selected
	Unacceptable	"Error Code" [CR]

### 9.10.2 CR\_MENU\_SIZE Command

Command	"CR_MENU_SIZE" [CR]	
Details	Get setting status of Menu size	
Response	Acceptable	"000_%1" [CR]
	%1	"NORMAL" ----- Normal is selected "DOUBLE" ----- Double is selected
	Unacceptable	"Error Code" [CR]

### 9.10.3 CR\_INPUTBUTTON Command

Command	"CR_INPUTBUTTON" [CR]	
Details	Get setting status of Input button	
Response	Acceptable	"000_%1" [CR]
	%1	"MODE1" ----- Input button mode is Mode1. "MODE2" ----- Input button mode is Mode2. "MODE3" ----- Input button mode is Mode3.
	Unacceptable	"Error Code" [CR]

### 9.10.4 CR\_DISP Command

Command	"CR_DISP" [CR]	
Details	Get setting status of Display	
Response	Acceptable	"000_%1" [CR]
	%1	"ON" ----- Display is ON "CNTDWNOFF" ----- Count down is OFF "OFF" ----- Display is OFF
	Unacceptable	"Error Code" [CR]

**9.10.5 CR\_BACKGND Command**

Command	"CR_BACKGND" [CR]	
Details	Get setting status of Screen for no signal	
Response	Acceptable	"000_%1" [CR]
	%1	"BLUE" ----- Blue Back is selected "USER" ----- User is selected "BLACK" ----- Black Back is selected
	Unacceptable	"Error Code" [CR]

**9.10.6 CR\_LOGO Command**

Command	"CR_LOGO" [CR]	
Details	Get setting status of Logo	
Response	Acceptable	"000_%1" [CR]
	%1	"DFLT" ----- Default Logo is enabled "USER" ----- User is enabled "OFF" ----- Logo is disabled
	Unacceptable	"Error Code" [CR]

**9.10.7 CR\_LOGOLOCK Command**

Command	"CR_LOGOLOCK" [CR]	
Details	Get setting status of Logo Lock function	
Response	Acceptable	"000_%1" [CR]
	%1	"ON" ----- Logo Lock is ON "OFF" ----- Logo Lock is OFF
	Unacceptable	"Error Code" [CR]

**9.10.8 CR\_PIP Command**

Command	"CR_PIP" [CR]	
Details	Get status of "Picture in Picture" setting	
Response	Acceptable	"000_%1" [CR]
	%1	"OFF" ----- Off is selected "USER1" ----- User1 is selected "USER2" ----- User2 is selected "USER3" ----- User3 is selected "USER4" ----- User4 is selected "USER5" ----- User5 is selected
	Unacceptable	"Error Code" [CR]

**9.10.9 CR\_PIPADJ Command**

Command	"CR_PIPADJ" [CR]	
Details	Get status (Free, Stored, or Adjust) of User1-User5 of "Picture in Picture".	
Response	Acceptable	"000_%1" [CR]
	%1	"FFFSA" --- User4 is Stored, User5 is Adjust and others are Free : "FFFFS" --- Only User5 is Stored, others are Free "SSSS" --- All Stored
	Unacceptable	"Error Code" [CR]

**9.10.10 CR\_PIPMODE Command**

Command	“CR_PIP” [CR]	
Details	Get Mode in “Picture in Picture”	
Response	Acceptable	“000_%1” [CR]
	%1	“PINP” ----- P in P is selected “PBYP” ----- P by P is selected
	Unacceptable	“Error Code” [CR]

**9.10.11 CR\_PIPMAININP Command**

Command	“CR_PIPMAININP” [CR]	
Details	Get Input and Source for “Picture in Picture”. (Main picture)	
Response	Acceptable	“000_%1_%2” [CR]
	%1	“1” ----- Input1 is selected “2” ----- Input2 is selected “3” ----- Input3 is selected
	%2	“DIGITAL” ----- DVI Input is selected “ANALOG” ----- ANALOG RGB is selected “VIDEO” ----- Video Input is selected “S-VIDEO” ----- S-VIDEO Input is selected “YPBPR” ----- Y, Pb/Cb, Pr/Cr Input is selected “SCART” ----- SCART Input is selected “HDCP” ----- HDCP Input is selected “HDMI” ----- HDMI Input is selected
	Unacceptable	“Error Code” [CR]

**9.10.12 CR\_PIPSUBINPU Command**

Command	“CR_PIPSUBINP” [CR]	
Details	Get Input and Source for “Picture in Picture”. (Sub picture)	
Response	Acceptable	“000_%1_%2” [CR]
	%1	“1” ----- Input1 is selected “2” ----- Input2 is selected “3” ----- Input3 is selected
	%2	“DIGITAL” ----- DVI Input is selected “ANALOG” ----- ANALOG RGB is selected “VIDEO” ----- Video Input is selected “S-VIDEO” ----- S-VIDEO Input is selected “YPBPR” ----- Y, Pb/Cb, Pr/Cr Input is selected “SCART” ----- SCART Input is selected “HDCP” ----- HDCP Input is selected “HDMI” ----- HDMI Input is selected
	Unacceptable	“Error Code” [CR]

**9.10.13 CR\_PIPSIZE Command**

Command	“CR_PIPSIZE” [CR]	
Details	Get picture size for “Picture in Picture”. (Sub picture)	
Response	Acceptable	“000_%1_%2” [CR]

	%1	"1" ----- 10% is selected(Main size) "2" ----- 20% is selected(Main size) "3" ----- 30% is selected(Main size) "4" ----- 40% is selected(Main size) "5" ----- 50% is selected(Main size) "6" ----- 60% is selected(Main size) "7" ----- 70% is selected(Main size) "8" ----- 80% is selected(Main size) "9" ----- 90% is selected(Main size) "10" ----- 100% is selected(Main size)
	%2	"1" ----- 10% is selected(Sub size) "2" ----- 20% is selected(Sub size) "3" ----- 30% is selected(Sub size) "4" ----- 40% is selected(Sub size) "5" ----- 50% is selected(Sub size)
	Unacceptable	"Error Code" [CR]

#### 9.10.14 CR\_PIPFRAMELOCK Command

Command	"CR_PIPFRAMELOCK" [CR]	
Details	Get setting status of Frame lock in "Picture in Picture".	
Response	Acceptable	"000_%1" [CR]
	%1	"MAIN" ----- Main picture is selected "SUB" ----- Sub picture is selected
	Unacceptable	"Error Code" [CR]

#### 9.10.15 CR\_PIPSTORE Command

Command	"CR_PIPSTORE" [CR]	
Details	Get status (Free or Stored) of User1-User5 for "Picture in Picture". Data consists of 5 bytes and each byte represents User1-5. (F:Free, S:Stored)	
Response	Acceptable	"000_%1" [CR]
	%1	"SFFFF" ----- Only User1 is Stored, others are Free : "FFFFS" ----- Only User5 is Stored, others are Free "SSSSS" ----- All Stored
	Unacceptable	"Error Code" [CR]

#### 9.10.16 CR\_EDGEBLENDING Command

Command	"CR_EDGEBLENDING" [CR]	
Details	Get setting status of Edge blending	
Response	Acceptable	"000_%1" [CR]
	%1	"ON" ----- On is selected "OFF" ----- Off is selected
	Unacceptable	"Error Code" [CR]

#### 9.10.17 CR\_BLEND Command

Command	"CR_BLEND" [CR]	
Details	Get all values set for Width in Edge blending	
Response	Acceptable	"000_%1_%2_%3_%4" [CR]

	%1, %2, %3, %4	Left width data comes first, and then one space, after that right width data is followed.  %1 = Left width %2 = Right width %3 = Top width %4 = Bottom width  e.g. “0100_0100_0100_0100”[CR] →Left = width 100 Right = width 100 Top = width 100 Bottom = width 100
	Unacceptable	“Error Code” [CR]

#### 9.10.18 CR\_BLENDSTART Command

Command	“CR_BLENDSTART” [CR]	
Details	Get all values set for Start in Edge blending	
	Acceptable	“000_%1_%2_%3_%4” [CR]
	%1, %2, %3, %4	Left width data comes first, and then one space, after that right width data is followed.  %1 = Left width %2 = Right width %3 = Top width %4 = Bottom width  e.g. “0100_0100_0100_0100”[CR] →Left = width 100 Right = width 100 Top = width 100 Bottom = width 100
	Unacceptable	“Error Code” [CR]

#### 9.10.19 CR\_BLENDBLK Command

Command	“CR_BLENDBLK” [CR]	
Details	Get all values set for Black level in Edge blending	
	Acceptable	“000_%1_%2_%3” [CR]
	%1, %2, %3	Data of red comes first, and then one space, after that data of green is followed. %1 = Red %2 = Green %3 = Blue  e.g. “0100_0100_0100”[CR] →Red = 100 Green = 100 Blue = 100
	Unacceptable	“Error Code” [CR]

#### 9.10.20 CR\_BLENDTESTPAT Command

Command	“CR_BLENDTESTPAT” [CR]	
Details	Get setting status of Test pattern of Edge blending	

Response	Acceptable	"000_%1" [CR]
	%1	"ON" ----- On is selected "OFF" ----- Off is selected
	Unacceptable	"Error Code" [CR]

### 9.10.21 CR\_COLORMATCHING Command

Command	"CR_COLORMATCHING" [CR]	
Details	Get setting status of Color matching	
Response	Acceptable	"000_%1" [CR]
	%1	"ON" ----- On is selected "OFF" ----- Off is selected
	Unacceptable	"Error Code" [CR]

### 9.10.22 CR\_CMMSXY\_%1 Command

Command	"CR_CMMSXY_%1" [CR]	
Details	Get "x", "y" value of Measured of Color matching	
Response	Acceptable	"000_%2_%3" [CR]
	%1	"RED" ----- value of Red is selected "GREEN" ----- value of Green is selected "BLUE" ----- value of Blue is selected
	%2	"0000"- "1000"----- "x" value of color of %1
	%3	"0000"- "1000"----- "y" value of color of %1
	Unacceptable	"Error Code" [CR]

### 9.10.23 CR\_CMMSL\_%1 Command

Command	"CR_CMMSL_%1" [CR]	
Details	Get "L" value of Measured of Color matching	
Response	Acceptable	"000_%2" [CR]
	%1	"RED" ----- value of Red is selected "GREEN" ----- value of Green is selected "BLUE" ----- value of Blue is selected
	%2	"0000"- "1000"----- "L" value of color of %1
	Unacceptable	"Error Code" [CR]

### 9.10.24 CR\_CMTGXY\_%1 Command

Command	"CR_CMTGXY_%1" [CR]	
Details	Get "x", "y" value of Target of Color matching	
Response	Acceptable	"000_%2" [CR]
	%1	"RED" ----- value of Red is selected "GREEN" ----- value of Green is selected "BLUE" ----- value of Blue is selected "WHITE" ----- value of White is selected "CYAN" ----- value of Cyan is selected "MAGENTA" ----- value of Magenta is selected "YELLOW" ----- value of Yellow is selected
	%2	"0000"- "1000"----- "x" value of color of %1
	%3	"0000"- "1000"----- "y" value of color of %1

	Unacceptable	“Error Code” [CR]
--	--------------	-------------------

**9.10.25 CR\_CMTGG\_%1 Command**

Command	“CR_CMMTGG_%1” [CR]	
Details	Get “g” value of Target of Color matching	
Response	Acceptable	“000_%2” [CR]
	%1	“RED” ----- value of Red is selected “GREEN” ----- value of Green is selected “BLUE” ----- value of Blue is selected “WHITE” ----- value of White is selected “CYAN” ----- value of Cyan is selected “MAGENTA” ----- value of Magenta is selected “YELLOW” ----- value of Yellow is selected
	%2	“0000”-“1000”----- “g” value of color of %1
	Unacceptable	“Error Code” [CR]

**9.10.26 CR\_CMAUTOTESTPAT Command**

Command	“CR_CMAUTOTESTPAT” [CR]	
Details	Get setting status of Auto test pattern of Color matching	
Response	Acceptable	“000_%1” [CR]
	%1	“ON” ----- On is selected “OFF” ----- Off is selected
	Unacceptable	“Error Code” [CR]

**9.10.27 CR\_CMMTESTPAT Command**

Command	“CR_CMMTESTPAT” [CR]	
Details	Get setting status of Test pattern(Measured) of Color matching	
Response	Acceptable	“000_%1” [CR]
	%1	“RED” ----- Red is displayed “GREEN” ----- Green is displayed “BLUE” ----- Blue is displayed “OFF” ----- Test pattern display is not displayed
	Unacceptable	“Error Code” [CR]

**9.10.28 CR\_CMTGTESTPAT Command**

Command	“CR_CMTGTESTPAT” [CR]	
Details	Get setting status of Test pattern(Target) of Color matching	
Response	Acceptable	“000_%1” [CR]
	%1	“RED” ----- Red is displayed “GREEN” ----- Green is displayed “BLUE” ----- Blue is displayed “WHITE” ----- White is displayed “CYAN” ----- Cyan is displayed “MAGENTA” ----- Magenta is displayed “YELLOW” ----- Yellow is displayed “OFF” ----- Test pattern display is not displayed
	Unacceptable	“Error Code” [CR]

**9.10.29 CR\_HDMI SETUP Command**

Command	"CR_HDMI SETUP"[CR]	
Details	Get status of Image mode in HDMI setup	
Response	Acceptable	"000_%1"[CR]
	%1	"NORMAL" ----- Image mode is Normal "ENHANCED" ----- Image mode is Enhanced
	Unacceptable	"Error code"[CR]

**9.10.30 CR\_FILREMAIN Command**

Command	"CR_FILREMAIN" [CR]	
Details	Get remaining number of usable Filter scroll	
Response	Acceptable	"000_%1" [CR]
	%1	"09" = Remaining number of usable Filter scroll : 9 times "00" = Remaining number of usable Filter scroll : 0 time
	Unacceptable	"Error Code" [CR]

**9.10.31 CR\_FILH Command**

Command	"CR_FILH" [CR]	
Details	Get Filter used time	
Response	Acceptable	"000_%1" [CR]
	%1	"00000 - 99999"
	Unacceptable	"Error Code" [CR]

**9.10.32 CR\_FILTIMER Command**

Command	"CR_FILTIMER" [CR]	
Details	Get Filter used time	
Response	Acceptable	"000_%1" [CR]
	%1	"0400" ----- Display massage by 400h used. "0700" ----- Display massage by 700h used. "1000" ----- Display massage by 1000h used. "OFF" ----- Off(Warning display is not displayed)
	Unacceptable	"Error Code" [CR]

**9.10.33 CR\_FILCOND Command**

Command	"CR_FILCOND" [CR]	
Details	Get status of filter clog	
Response	Acceptable	"000_%1" [CR]
	%1	"CLOG" = Filter is clogged "WARN" = Filter is nearly clogged "CLEAN" = Filter is not clogged
	Unacceptable	"Error Code" [CR]

**9.10.34 CR\_FILREPL Command**

Command	"CR_FILREPL" [CR]	
Details	Get status of Filter cleaning / replacement time	

Response	Acceptable	"000_%1" [CR]
	%1	"1Y"-----Filter Exchange time is over value of Filter Message. "1N"--Filter Exchange time is not over value of Filter Message.
	Unacceptable	"Error Code" [CR]

**9.10.35 CR\_FANSPEED Command**

Command	"CR_FANSPEED" [CR]	
Details	Get selected Fan Control Speed mode.	
Response	Acceptable	"000_%1" [CR]
	%1	"MAX" ----- Max mode is selected "NOR" ----- Normal mode is selected
	Unacceptable	"Error Code" [CR]

**9.10.36 CR\_SIMPLEMODE Command**

Command	"CR_SIMPLEMODE" [CR]	
Details	Get setting status of Simple mode.	
Response	Acceptable	"000_%1" [CR]
	%1	"ON" ----- Simple mode is ON "OFF" ----- Simple mode is OFF
	Unacceptable	"Error Code" [CR]

**9.10.37 CR\_RCODE Command**

Command	"CR_RCODE" [CR]	
Details	Get selected Remote Control Code	
Response	Acceptable	"000_%1" [CR]
	%1	"001" ----- Code 1 is selected "002" ----- Code 2 is selected "003" ----- Code 3 is selected "004" ----- Code 4 is selected "005" ----- Code 5 is selected "006" ----- Code 6 is selected "007" ----- Code 7 is selected "008" ----- Code 8 is selected
	Unacceptable	"Error Code" [CR]

**9.10.38 CR\_RSENS Command**

Command	"CR_RSENS" [CR]	
Details	Get selected location of infrared remote receiver of remote control	
Response	Acceptable	"000_%1" [CR]
	%1	"BOTH" ----- Select both front and back receiver of projector "TOP" ----- Select only top receiver of projector "BACK" ----- Select only back receiver of projector
	Unacceptable	"Error Code" [CR]

**9.10.39 CR\_RTYPE Command**

Command	"CR_RTYPE" [CR]	
Details	Get status of supported Remote Control (IR/RF).	

Response	Acceptable	"000_%1" [CR]
	%1	"IR" ----- IR "RF" ----- RF (cannot be returned as this model supports only IR remote control)
	Unacceptable	"Error Code" [CR]

**9.10.40 CR\_P-MANE Command**

Command	"CR_P-MANE" [CR]	
Details	Get setting status of Power management	
Response	Acceptable	"000_%1" [CR]
	%1	"OFF" ----- Power Management is disabled "READY1" ----- Power Management is set to Ready1 "READY2" ----- Power Management is set to Ready2 "SHUTDOWN" ----- Power Management is set to Shut Down mode
	Unacceptable	"Error Code" [CR]

**9.10.41 CR\_P-MANETIME Command**

Command	"CR_P-MAETIME" [CR]	
Details	Get setting time for starting Power Management function	
Response	Acceptable	"000_%1" [CR]
	%1	"001 – 030" ----- 1 to 30 minutes
	Unacceptable	"Error Code" [CR]

**9.10.42 CR\_ON-STA Command**

Command	"CR_ON-STA" [CR]	
Details	Get Direct on setting status	
Response	Acceptable	"000_%1" [CR]
	%1	"ON" ----- Direct on is active "OFF" ----- Direct on is inactive
	Unacceptable	"Error Code" [CR]

**9.10.43 CR\_POINTER Command**

Command	"CR_POINTER" [CR]	
Details	Get setting status of Pointer	
Response	Acceptable	"000_%a" [CR]
	%1	"ARROW" ----- Arrow Pointer mode "FINGER" ----- Finger Pointer mode "LASER" ----- Dot Pointer mode
	Unacceptable	"Error Code" [CR]

**9.10.44 CR\_PTIMEMODE Command**

Command	"CR_PTIMEMODE" [CR]	
Details	Get setting status of count up/down mode in P-timer	
Response	Acceptable	"000_%a" [CR]

	%1	“COUNTUP” ----- Set P-timer to Count up mode “COUNTDN” ----- Set P-timer to Count down mode
	Unacceptable	“Error Code” [CR]

**9.10.45 CR\_PTIMER Command**

Command	“CR_PTIMER” [CR]	
Details	Get setting status of P-timer	
Response	Acceptable	“000_%a” [CR]
	%1	“ON” ----- P-timer is activated “STOP” ----- P-timer is temporarily suspended “OFF” ----- Exit P-timer function
	Unacceptable	“Error Code” [CR]

**9.10.46 CR\_PTIME Command**

Command	“CR_PTIME” [CR]	
Details	Get setting time for count down mode of P-timer	
Response	Acceptable	“000_%a” [CR]
	%1	“001” – “180” ----- 1 to 180 minutes
	Unacceptable	“Error Code” [CR]

**9.10.47 CR\_KEYDIS Command**

Command	“CR_KEYDIS” [CR]	
Details	Get status of RC/KEY (valid or invalid)	
Response	Acceptable	“000_%1” [CR]
	%1	“NONE” ----- RC and KEY, both are valid “RC” ----- RC is invalid “KEY” ----- KEY is invalid
	Unacceptable	“Error Code” [CR]

**9.10.48 CR\_SECURITY Command**

Command	“CR_SECURITY” [CR]	
Details	Get ON/OFF setting status of Security on menu.	
Response	Acceptable	“000_%1” [CR]
	%1	“ON” ----- PJ is locked “OFF” ----- PJ is not locked.
	Unacceptable	“Error Code” [CR]

**9.10.49 CR\_PJLOCKNOW Command**

Command	“CR_PJLOCKNOW” [CR]	
Details	Get actual setting status of PIN code lock	
Response	Acceptable	“000_%1” [CR]

	%1	<p>“LOCK” ----- PJ is locked  PIN code lock is set to ON1/ON2 on the menu and PJ PIN code is not entered, therefore PJ is actually locked.</p> <p>“FREE” ----- PJ is unlocked (either A or B)</p> <p>A) PJ lock is set to OFF on the menu</p> <p>B) PJ lock is set to ON1/ON2 on the menu, but PIN code Lock mode is released because PJ PIN code is entered.</p>
	Unacceptable	“Error Code” [CR]

#### 9.10.50 CR\_PJLOCKMENU Command

Command	“CR_PJLOCKMENU” [CR]	
Details	Get ON/OFF setting status of PIN code lock on menu	
Response	Acceptable	“000_%1” [CR]
	%1	<p>“ON1” ----- PIN code lock ON 1 is set on the menu</p> <p>“ON2” ----- PIN code lock ON 2 is set on the menu</p> <p>“OFF” ----- PIN code lock OFF is set on the menu</p>
	Unacceptable	“Error Code” [CR]

#### 9.10.51 CR\_SHUTPROT Command

Command	“CR_SHUTPROT” [CR]	
Details	Get disability state of Side panel and RC key for controlling shutter	
Response	Acceptable	“000_%1” [CR]
	%1	<p>“OFF” ----- RC and Side panel are both valid.</p> <p>“RC” ----- RC is invalid</p> <p>“KEY” ----- KEY is invalid</p> <p>“BOTH” ----- RC and Side panel are both invalid.</p>
	Unacceptable	“Error Code” [CR]

#### 9.10.52 CR\_SHUTRELEASE Command

Command	“CR_SHUTRELEASE” [CR]	
Details	Get status of Shutter release key function.	
Response	Acceptable	“000_%1” [CR]
	%1	<p>“ANY”-----Enable to release Shutter with any key</p> <p>“SHUTTER” ---- Enable to release Shutter with only “SHUTTER” key</p>
	Unacceptable	“Error Code” [CR]

#### 9.10.53 CR\_SHUTH Command

Command	“CR_SHUTH” [CR]	
Details	Get time setting to start the shutter management	
Response	Acceptable	“000_%1” [CR]
	%1	<p>“005” ----- 5 minutes</p> <p>“006” ----- 6 minutes</p> <p>:</p> <p>“479” ----- 479 minutes</p> <p>“480” ----- 480 minutes</p>
	Unacceptable	“Error Code” [CR]

**9.10.54 CR\_CCAPTIONDISP Command**

Command	“CR_CCAPTIONDISP”[CR]	
Details	Get selected channel of Closed caption	
Response	Acceptable	“000_%a”[CR]
	%a	“OFF” ----- Off
		“CC1” ----- CC1 is selected
		“CC2” ----- CC2 is selected
Response	Unacceptable	“CC3” ----- CC3 is selected
		“CC4” ----- CC4 is selected
Response	Unacceptable	“Error Code”[CR]

**9.10.55 CR\_CCAPTIONCOLOR Command**

Command	“CR_CCAPTIONCOLOR”[CR]	
Details	Get selected color of Closed caption	
Response	Acceptable	“000”[CR]
	%a	“COLOR” ----- Color is selected
		“WHITE” ----- White is selected
	Unacceptable	“Error Code”[CR]

**9.10.56 CR\_DELAYCTRL Command**

Command	“CR_DELAYCTRL” [CR]	
Details	Get setting status of Video delay control	
Response	Acceptable	“000_%1” [CR]
	%1	“OFF”----- Set Video delay control to OFF
		“LOW”----- Set Video delay control to LOW
		“MID”----- Set Video delay control to MID
		“HIGH”----- Set Video delay control to HIGH
Response	Unacceptable	“Error Code” [CR]

**9.10.57 CR\_TESTPAT Command**

Command	“CR_TESTPAT” [CR]	
Details	Get setting status of Test pattern	
Response	Acceptable	“000_%1” [CR]
	%1	“COLOR” ----- Color bar is displayed
		“GRAD1” ----- 16step(white→black) is displayed
		“GRAD2” ----- 16step(white←black) is displayed
		“GRAD3” ----- 16step(white↓black) is displayed
		“GRAD4” ----- 16step(white↑black) is displayed
		“WHITE” ----- All white is displayed
		“BLACK” ----- All black is displayed
		“CROSS” ----- Cross is displayed
		“OFF” ----- Test pattern display is not displayed
Response	Unacceptable	“Error Code” [CR]

## 9.11 Other Status Read Commands

### 9.11.1 CR\_STATUS Command

COMMAND	"CR_STATUS" [CR]	
Detail	Get operating status of Projector Same as "CR0" in basic command except error code follows it.	
Response	Acceptable %1	<p>"00" = Power ON          "80" = Standby          "40" = Countdown in process          "20" = Cooling Down in process          "10" = Power Failure          "28" = Cooling Down in process due to abnormal temperature          "88" =Standby after Cooling Down due to abnormal temperature          "24" = Power Save/Cooling Down in process          "04" = Power Save          "21" = Cooling Down in process after turned Off due to lamp failure          "81"= Standby after Cooling Down due to lamp failure          "2C" = Cooling Down in process after Power Off due to Shutter management          "8C"= Standby after Cooling Down due to Shutter management       </p>
	Unacceptable	"Error Code" [CR]

### 9.11.2 CR\_SIGNAL Command

Command	"CR_SIGNAL" [CR]	
Details	Get status whether there is any signal or not.	
Response	Acceptable %1	<p>"000_%1" [CR]          "ON" ----- There is signal          "OFF" ----- There is no signal       </p>
	Unacceptable	"Error Code" [CR]

### 9.11.3 CR\_VMUTE Command

Command	"CR_VMUTE" [CR]	
Details	Get setting status of Video Mute.	
Response	Acceptable %1	<p>"000_%1" [CR]          "ON" ----- Set Video Mute (Shutter CLOSE)          "OFF" ----- Cancel Video Mute (Shutter OPEN)       </p>
	Unacceptable	"Error Code" [CR]

### 9.11.4 CR\_FREEZE Command

Command	"CR_FREEZE" [CR]	
Details	Get setting status of Freeze.	
Response	Acceptable %1	<p>"000_%1" [CR]          "ON" ----- Freeze is enabled          "OFF" ----- Freeze is disabled       </p>
	Unacceptable	"Error Code" [CR]

### 9.11.5 CR\_TEMPFAIL Command

Command	“CR_TEMPFAIL” [CR]	
Details	Get the temperature inside a projector when abnormal temperature status occurs. It is possible to get the temperatures all at once when several sensors installed.	
Acceptable	“000_%1_%2_%3” [CR]	
Response	%1,%2,%3	<p>%1 ----- Sensor 1 temp.            %2 ----- Sensor 2 temp.            %3 ----- Sensor 3 temp.            e.g. “_31.5F”            “_” indicates a space. When the temperature goes under 0, the first character is “-”, not a space, as in “-05.5F”.            With more than one temperature sensors installed, projector returns responses in a row.            e.g. “_31.5F _ _35.2S _ _38.0W” [CR]            The first data indicates sensor 1 data, then one space, and sensor 2 data.            Last character in each data indicates the sensor’s status.</p> <ul style="list-style-type: none"> <li>“F” ----- Exceeding critical temp. (abnormal temp.)</li> <li>“W” ----- Approaching critical temp. (Warning temp.)</li> <li>“S” ----- Sensor temp. is safe (Safe temp.)</li> <li>“N” ----- Sensor detects no critical temp.</li> <li>“E” ----- Unable to return the temp. data</li> </ul> <p>The example 1 shows that sensor 1 indicates 31.5 degrees and the temperature is abnormal, sensor 2 indicates 35.2 degrees and the temperature is safe, sensor 3 indicates 38.0 degrees and the temperature is approaching critical state.            When the temperature is safe, all data is represented as “_00.0S”.            When the projector is reset, “_00.0S” is set, and every time abnormal temperature occurs, it renews the data and returns it.            In short, it only returns the renewed data of the latest abnormal temperature and the previous data is deleted.</p>
Unacceptable	“Error Code” [CR]	

### 9.11.6 CR\_TEMP Command

Command	"CR_TEMP" [CR]	
Details	Get the current temperature information inside a projector. It is possible to get the temperatures all at once when several sensors installed.	
	Acceptable	"000_%1_%2_%3" [CR]
		%1 ----- Sensor 1 temp. (External temp.) %2 ----- Sensor 2 temp. (Internal temp.1) %3 ----- Sensor 3 temp. (Internal temp.2) %1, %2 are fixed 6 characters There is one space between %1 and %2 There is one space between %2 and %3 e.g. "_31.5F" " " indicates a space. When the temperature goes under 0, the first character is "-", not a space, as in "-05.5F". Last character in each data indicates the sensor's status. "F" ----- Exceeding critical temp. (abnormal temp.) "W" ----- Approaching critical temp. (Warning temp.) "S" ----- Sensor temp. is safe (Safe temp.) "N" ----- Sensor detects no critical temp. "E" ----- Unable to return the temp. data With more than one temperature sensors installed, projector returns responses in a row. e.g. "_31.5F _ 35.2S _ 38.0W" [CR] The first data indicates sensor 1 data, then one space, and sensor 2 data.  The example 1 shows that sensor 1 indicates 31.5 degrees and the temperature is abnormal, sensor 2 indicates 35.2 degrees and the temperature is safe, sensor 3 indicates 38.0 degrees and the temperature is approaching critical state. When it cannot return the temperature data due to hardware error, the last character is "E" as in "_00.0E" It might happen for some projectors that the temperature continues to go up to abnormal status as long as lamp ballasts are hot. Therefore when in Standby mode or for several tens of seconds after Power is ON, any treatment of Power Failure is not processed. In that case, the temperature data is represented as "---- N".
	Response	%1, %2, %3
	Unacceptable	"Error Code" [CR]

### 9.11.7 CR\_SHUTCOND Command

Command	"CR_SHUTCOND" [CR]	
Details	Get setting status of Shutter.	
	Acceptable	"000_%1" [CR]
	Response	%1
		"SAFE" ----- Shutter operation is normal. "FAIL" ----- Shutter operation is abnormal.
	Unacceptable	"Error Code" [CR]

### 9.11.8 CR\_SERIALNO Command

Command	"CR_SERIALNO" [CR]	
Details	Get value of the serial number.	
	Acceptable	"000_%1" [CR]
	Response	%1
		Eight digits of alphanumeric characters
	Unacceptable	"Error Code" [CR]